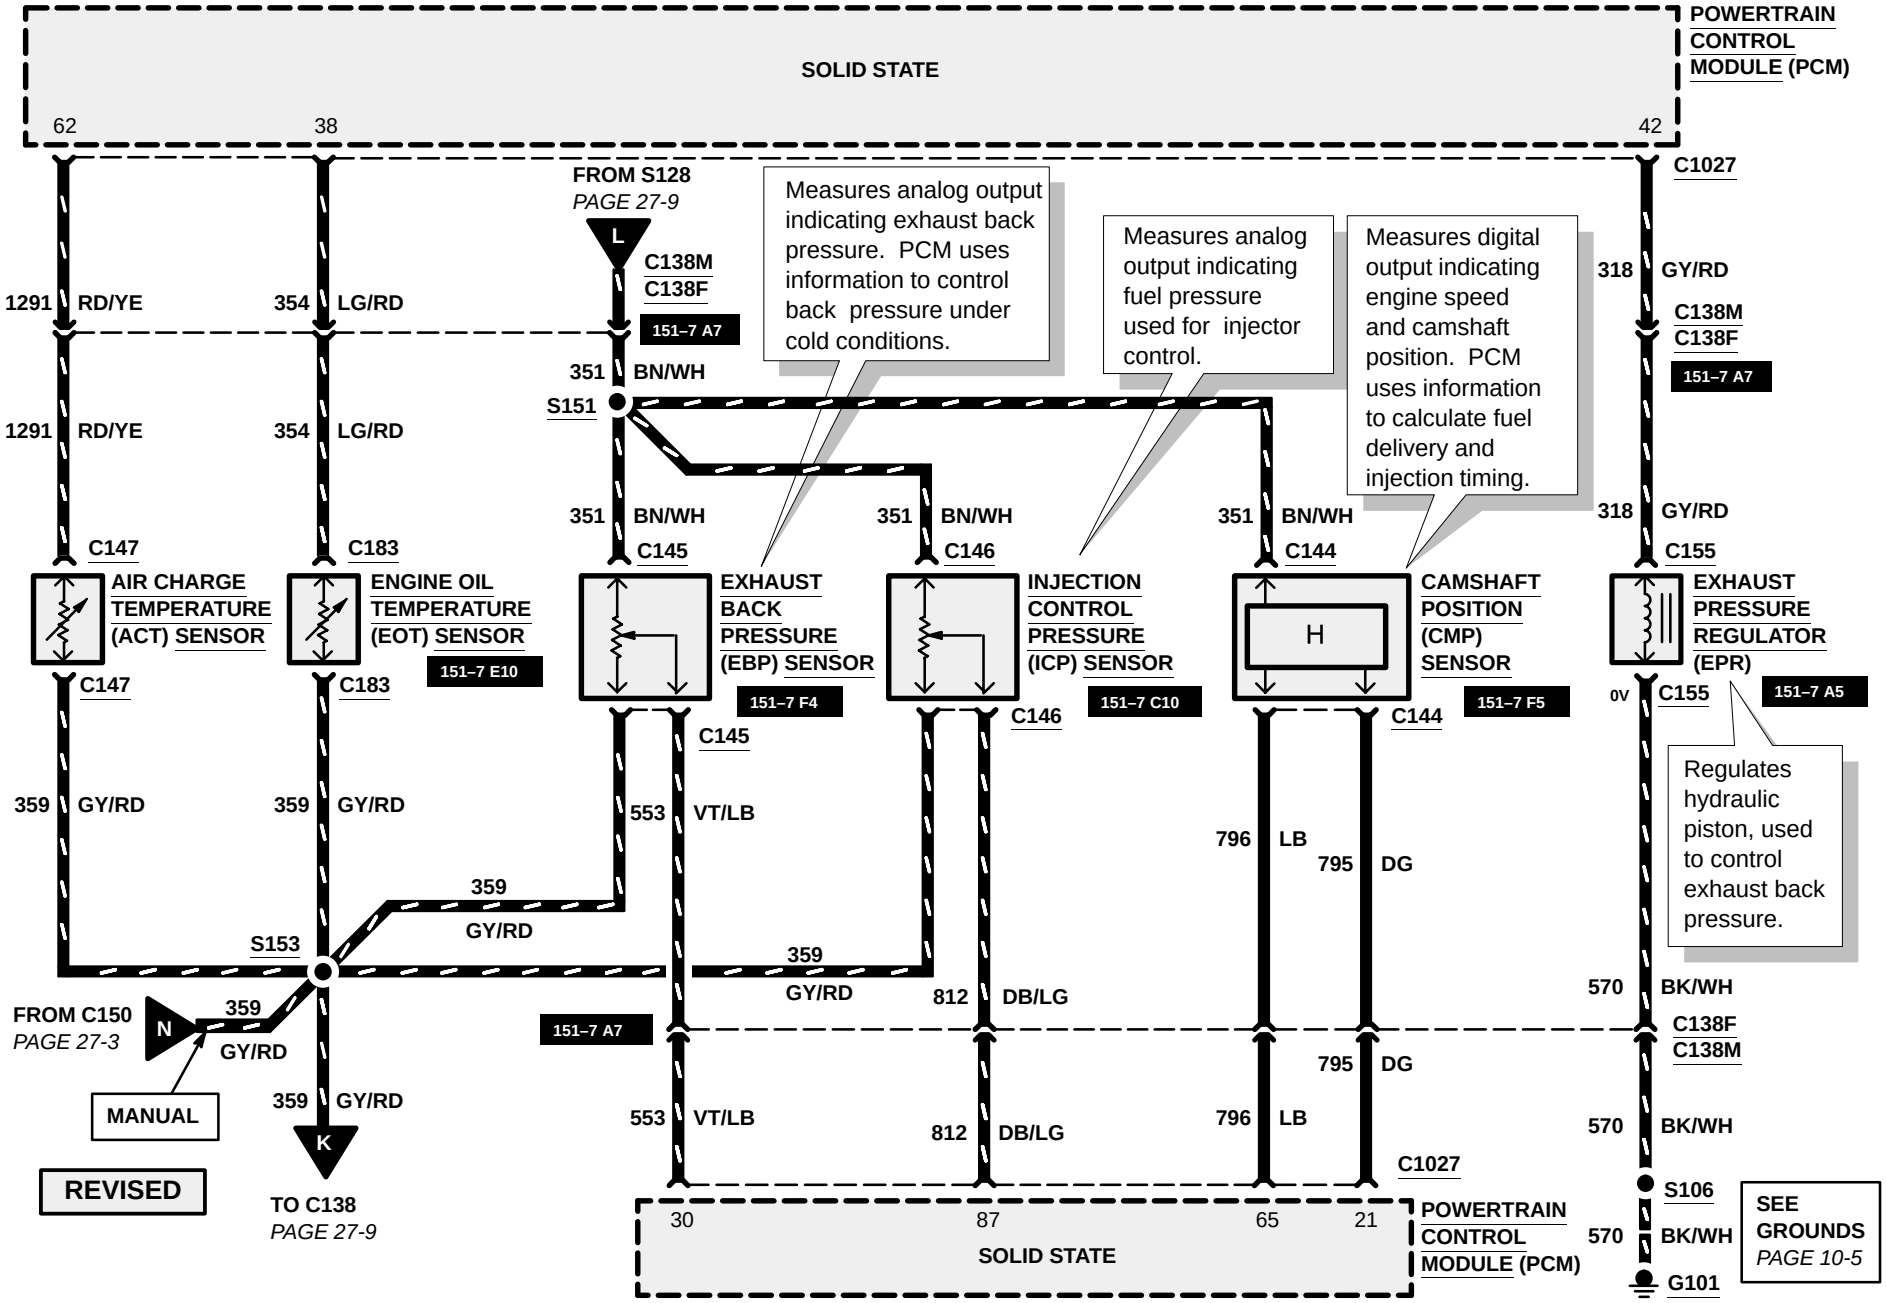
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
62
38
42
FROM S128
PAGE 27-9
L
C138M
C138F
151–7 A7
C1027
318 GY/RD
1291 RD/YE
354 LG/RD
351 BN/WH
S151
Measures analog output indicating exhaust back pressure. PCM uses information to control back pressure under cold conditions.
Measures analog output indicating fuel pressure used for injector control.
Measures digital output indicating engine speed and camshaft position. PCM uses information to calculate fuel delivery and injection timing.
C147
C183
C145
C146
C144
C155
AIR CHARGE TEMPERATURE (ACT) SENSOR
ENGINE OIL TEMPERATURE (EOT) SENSOR
151–7 E10
EXHAUST BACK PRESSURE (EBP) SENSOR
151–7 F4
INJECTION CONTROL PRESSURE (ICP) SENSOR
151–7 C10
CAMSHAFT POSITION (CMP) SENSOR
151–7 F5
EXHAUST PRESSURE REGULATOR (EPR)
151–7 A5
0V
359 GY/RD
553 VT/LB
796 LB
795 DG
812 DB/LG
570 BK/WH
Regulates hydraulic piston, used to control exhaust back pressure.
S153
FROM C150
PAGE 27-3
N
MANUAL
REVISED
K
TO C138
PAGE 27-9
151–7 A7
30
87
65
21
S106
G101
SEE GROUNDS
PAGE 10-5