C281b

14401

A255
Four–wheel drive control module

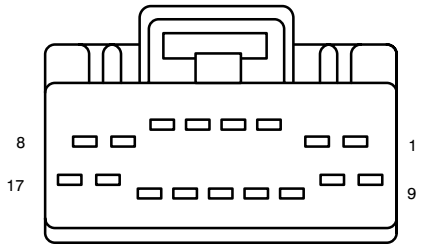

F17005

Pin	Circuit	Circuit Function
1	435 (YE/LB)	signal, return
2	570 (BK/WH)	Ground
3	–	not used
4	762 (YE/WH)	Motor position 1
5	–	not used
6	783 (GY)	Four–wheel drive, indicator, High
7	764 (BN/WH)	Motor position 3
8	–	not used
9	784 (LB/BK)	Four–wheel drive, indicator, Low
10	–	not used
11	–	not used
12	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
13	763 (OG/WH)	Motor position 2
14	–	not used
15	–	not used
16	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
17	–	not used

C282

14401

N316
Inertia Fuel Shutoff (IFS) switch



F03032

Pin	Circuit	Circuit Function
1	–	not used
2	787 (PK/BK)	Fuel pump, Power
3	238 (DG/YE)	Fuel pump relay, switched power, output

C284

14401

N141
Four–wheel drive switch



F04027

Pin	Circuit	Circuit Function
1	19 (LB/RD)	Power, Hot with Headlamps on
2	465 (WH/LB)	Low coolant level switch, input
3	435 (YE/LB)	signal, return
4	57 (BK)	Ground

C290

14401

A220
Audio unit

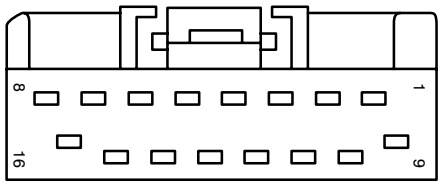

F16071

Pin	Circuit	Circuit Function
1	19 (LB/RD)	Power, Hot with Headlamps on
2	57 (BK)	Ground
3	1000 (RD/BK)	Voltage supplied in Start (overload protected)
4	–	not used
5	802 (OG/RD)	Speaker, right rear +
6	803 (BN/PK)	Speaker, right rear –
7	805 (WH/LG)	Speaker, right front +
8	811 (DG/OG)	Speaker, right front –
9	797 (LG/VT)	Voltage supplied at all times (overload protected)
10	137 (YE/BK)	Voltage in Run or Accessory (overload protected)
11	694 (BK/LG)	Ground
12	800 (GY/LB)	Speaker, left rear +
13	801 (TN/YE)	Speaker, left rear –
14	804 (OG/LG)	Speaker, left front +
15	813 (LB/WH)	Speaker, left front –
16	694 (BK/LG)	Ground