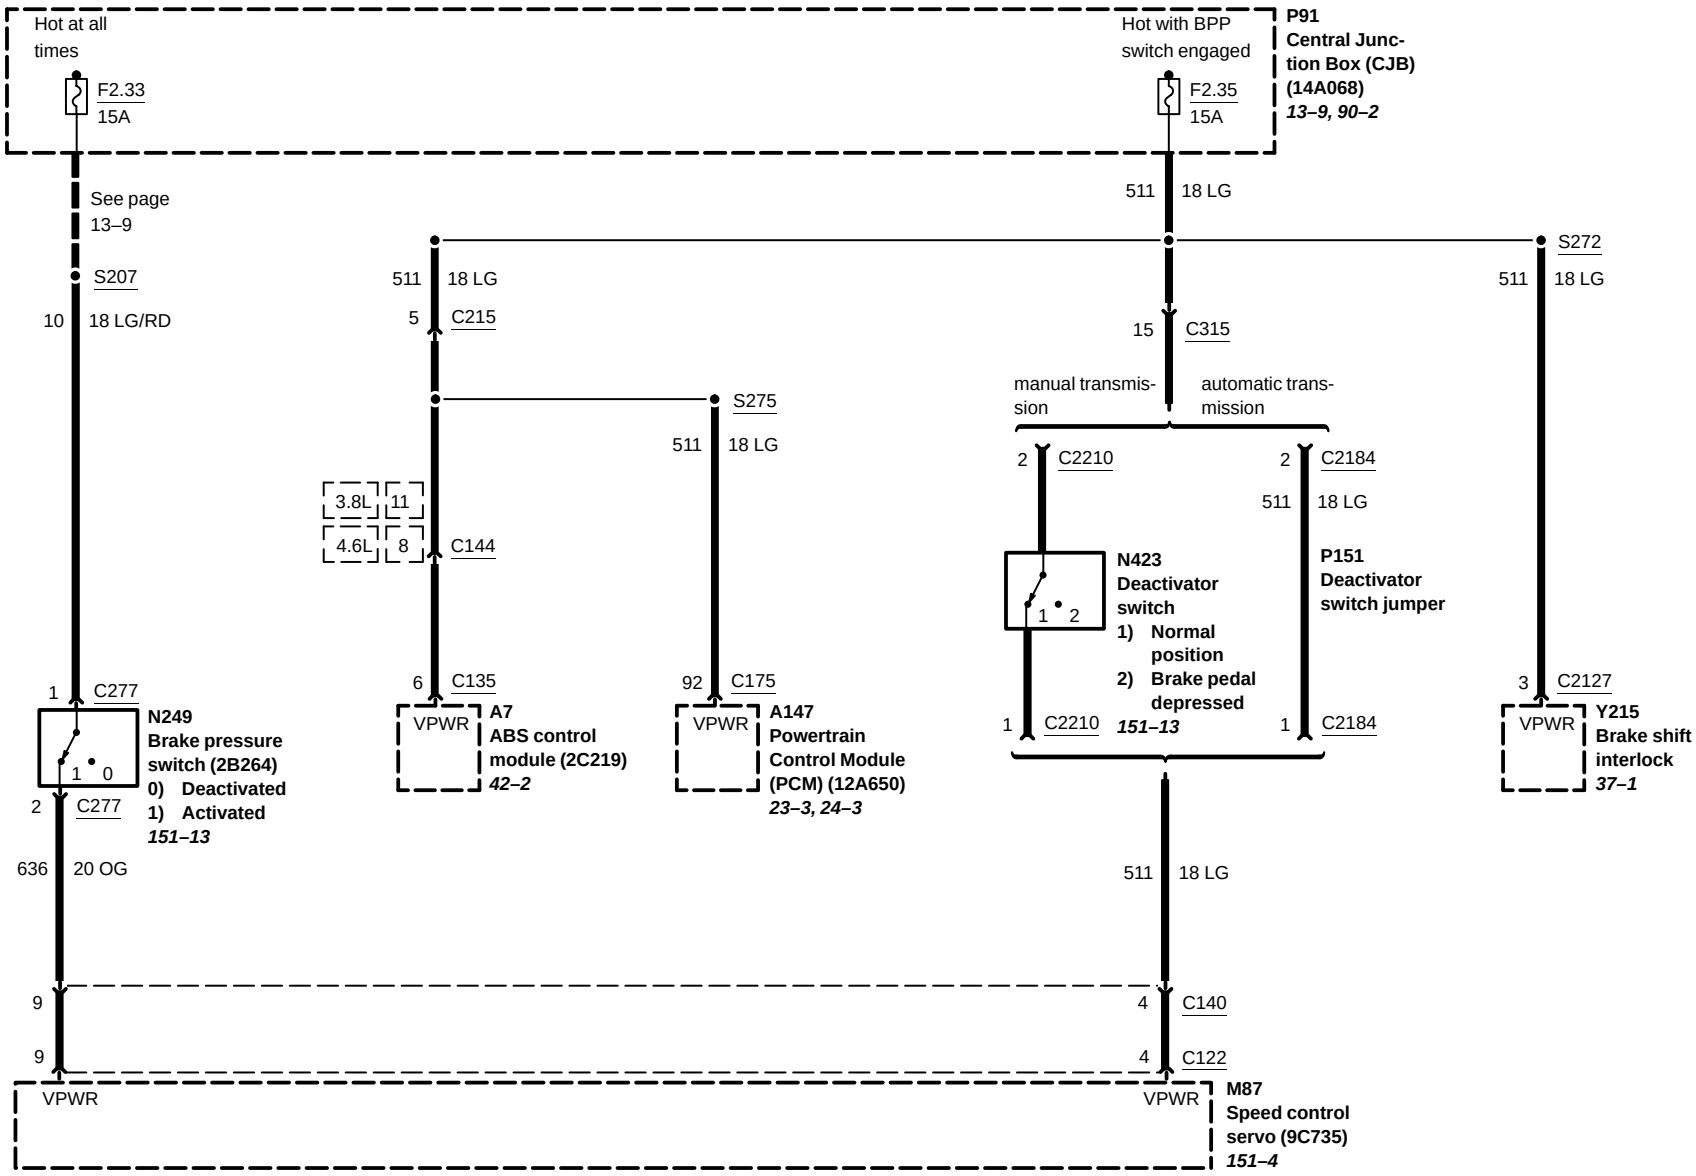
Hot at all times
F2.33
15A
Hot with BPP switch engaged
F2.35
15A
P91
Central Junction Box (CJB)
(14A068)
13–9, 90–2
See page 13–9
511 18 LG
S207
10 18 LG/RD
511 18 LG
5 C215
15 C315
S272
511 18 LG
manual transmission
automatic transmission
S275
511 18 LG
2 C2210
2 C2184
511 18 LG
3.8L 11
4.6L 8 C144
N423
Deactivator switch
1) Normal position
2) Brake pedal depressed
151–13
P151
Deactivator switch jumper
1 C277
6 C135
92 C175
3 C2127
N249
Brake pressure switch (2B264)
0) Deactivated
1) Activated
151–13
VPWR
A7
ABS control module (2C219)
42–2
VPWR
A147
Powertrain Control Module (PCM) (12A650)
23–3, 24–3
1 C2210
1 C2184
VPWR
Y215
Brake shift interlock
37–1
2 C277
636 20 OG
511 18 LG
9
9
4 C140
4 C122
VPWR
VPWR
M87
Speed control servo (9C735)
151–4