C3008a

14A488

A262
Central security module

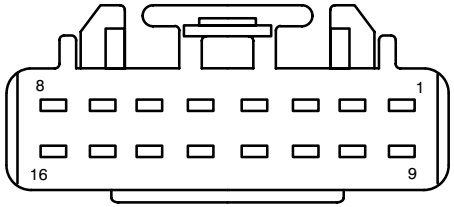

F16038

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	1205 (BK)	Ground
3	202 (OG/LG)	Liftgate glass actuator, output
4	–	not used
5	163 (RD/OG)	Driver door unlock relay, switched power
6	1 (DB)	Horn relay, control
7	1003 (GY/YE)	Voltage supplied at all times (overload protected)
8	456 (DG/OG)	Voltage supplied at all times (overload protected)
9	118 (PK/OG)	Door unlock, output
10	66 (LB)	Key pad illumination
11	268 (BK/OG)	Memory set switch (14776), position 2
12	124 (BN)	Key pad common
13	267 (BN/LG)	Memory set switch (14776), position 1
14	14 (BN)	Power, Exterior lamps
15	–	not used
16	1003 (GY/YE)	Voltage supplied at all times (overload protected)

C3008b

14A488

A262
Central security module

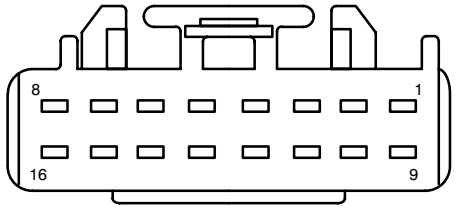

F16077

Pin	Circuit	Circuit function
1	765 (YE/BK)	Door ajar switch, left front
2	761 (GY/RD)	Door ajar switch, right front
3	6 (YE/LG)	Horn switch, input
4	–	not used
5	25 (DG/VT)	Anti–theft, switch, disarm
6	78 (LB/YE)	Key pad button 1/2, output
7	760 (PK/LB)	Door ajar switch, right rear
8	119 (PK/YE)	Door lock relay, control, input
9	759 (LG/YE)	Door ajar switch, left rear
10	120 (PK/LG)	Door unlock relay, control, input
11	23 (TN/LG)	Anti–theft, switch sense
12	700 (WH/VT)	Liftgate ajar switch
13	–	not used
14	1351 (TN)	Liftgate glass release switch to Central security module
15	122 (YE)	Key pad button 5/6, output
16	123 (RD)	Key pad button 3/4, output