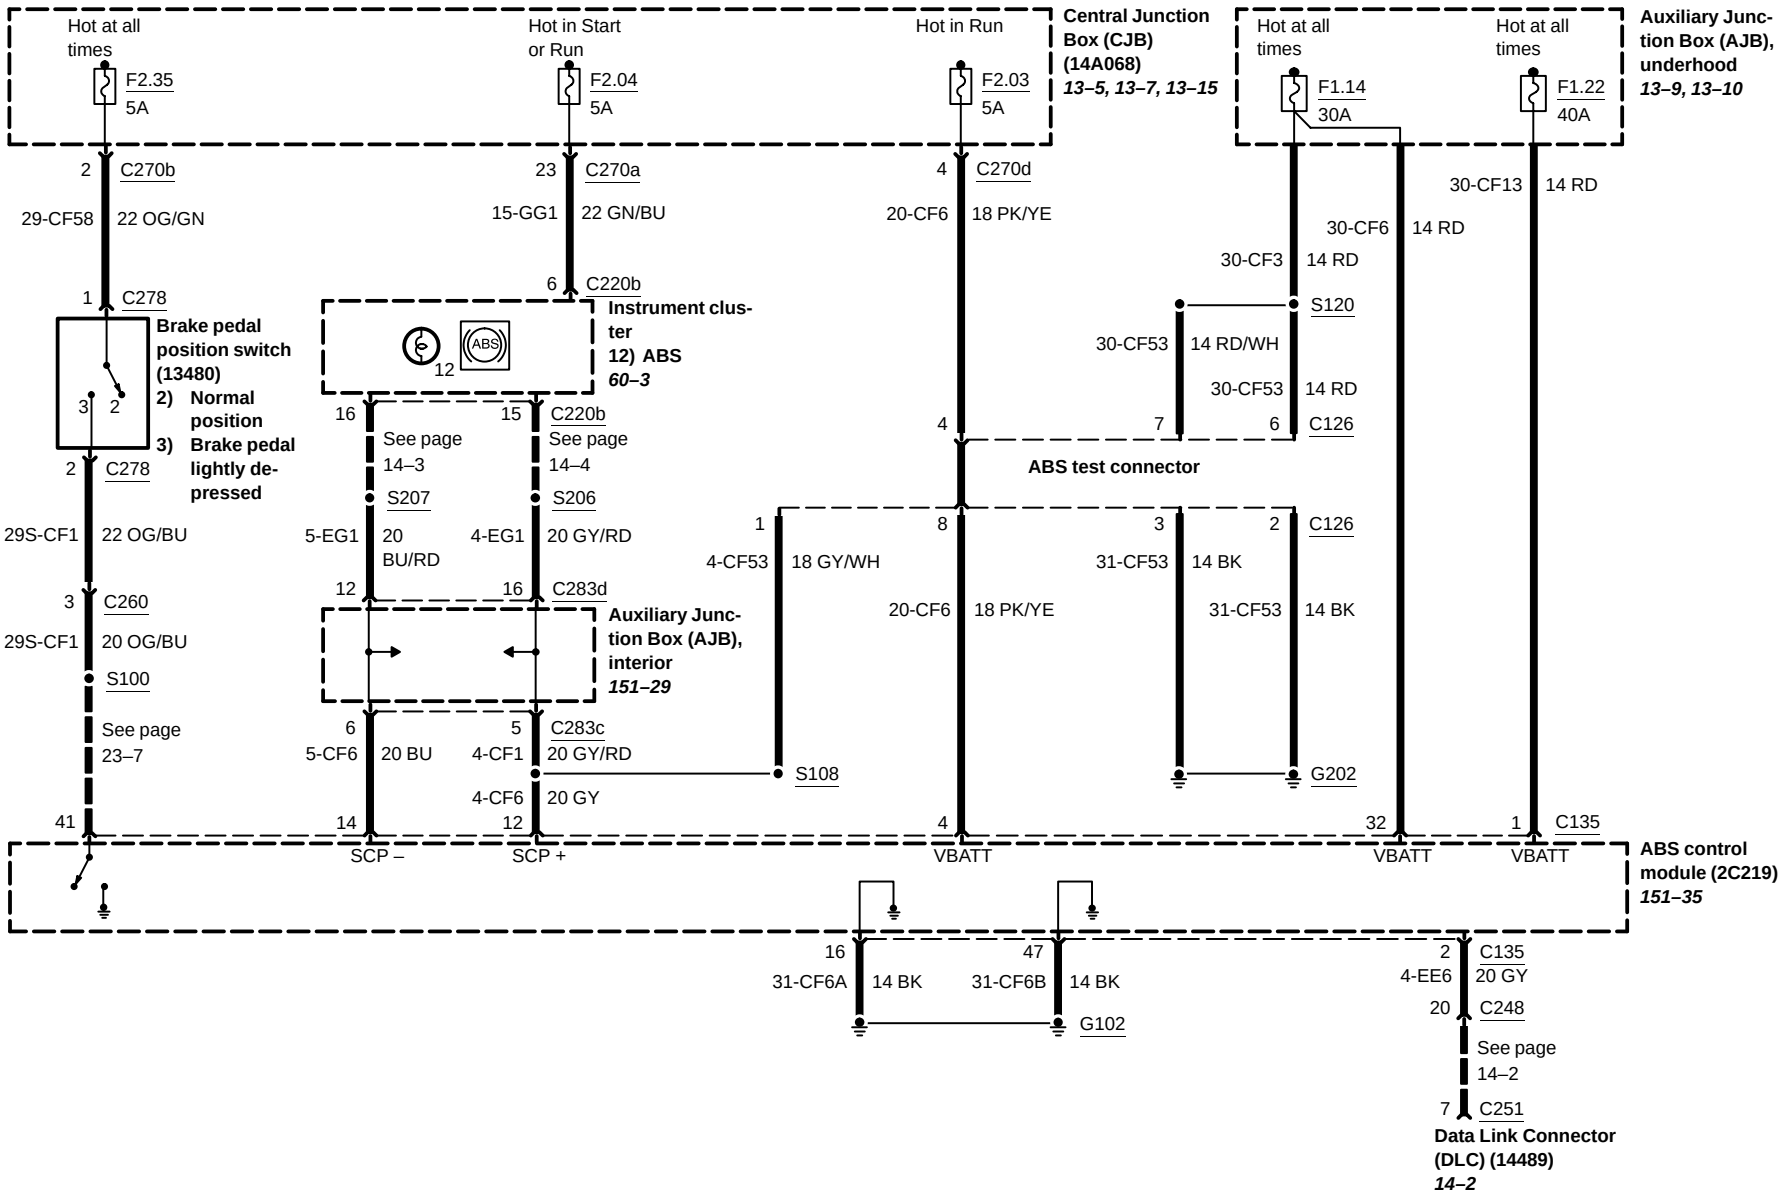
Hot at all times
F2.35
5A
Hot in Start or Run
F2.04
5A
Hot in Run
F2.03
5A
Central Junction Box (CJB) (14A068)
13–5, 13–7, 13–15
Hot at all times
F1.14
30A
Hot at all times
F1.22
40A
Auxiliary Junction Box (AJB), underhood
13–9, 13–10
2 C270b
29-CF58 22 OG/GN
23 C270a
15-GG1 22 GN/BU
4 C270d
20-CF6 18 PK/YE
30-CF13 14 RD
30-CF6 14 RD
30-CF3 14 RD
1 C278
6 C220b
Brake pedal position switch (13480)
2) Normal position
3) Brake pedal lightly depressed
Instrument cluster
12) ABS
60–3
30-CF53 14 RD/WH
S120
30-CF53 14 RD
7 6 C126
4
ABS test connector
16 15 C220b
See page 14–3
See page 14–4
S207
S206
5-EG1 20 BU/RD
4-EG1 20 GY/RD
1 8 3 2 C126
4-CF53 18 GY/WH
31-CF53 14 BK
20-CF6 18 PK/YE
31-CF53 14 BK
2 C278
29S-CF1 22 OG/BU
12 16 C283d
Auxiliary Junction Box (AJB), interior
151–29
3 C260
29S-CF1 20 OG/BU
S100
See page 23–7
6 5 C283c
5-CF6 20 BU
4-CF1 20 GY/RD
4-CF6 20 GY
S108
G202
41 14 12 4 32 1 C135
SCP –
SCP +
VBATT
VBATT
VBATT
ABS control module (2C219)
151–35
16 47 2 C135
31-CF6A 14 BK
31-CF6B 14 BK
4-EE6 20 GY
G102
20 C248
See page 14–2
7 C251
Data Link Connector (DLC) (14489)
14–2