C9000 (BK)

14335

Power liftgate open/ close switch

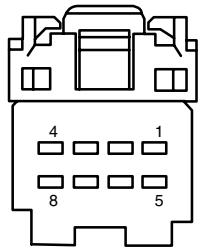

F08281

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	19 (LB/RD)	Illumination, Power
3	–	not used
4	57 (BK)	Ground
5	–	not used
6	–	not used
7	913 (GY/RD)	Power liftgate open/close switch, signal
8	–	not used

C9001 (BK)

14335

Roof opening panel switch (15B691)

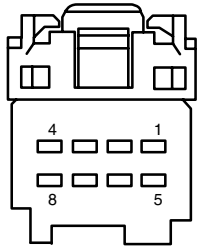

F08281

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	19 (LB/RD)	Illumination, Power
3	1175 (TN/RD)	Roof opening panel switch (15B691), Close, Up, signal
4	1173 (BN/OG)	Roof opening panel switch (15B691), feed
5	–	not used
6	–	not used
7	1174 (WH/RD)	Roof opening panel switch (15B691), Open, Down, signal
8	–	not used

C9003 (BK)

14335

Safety canopy delete resistor, right

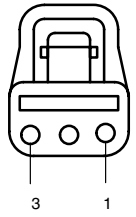

F03035

Pin	Circuit	Circuit function
1	1259 (WH/YE)	Safety canopy, right, feed
2	–	not used
3	1260 (BN/YE)	Safety canopy, right, return