## C270f

**12A581**

Central Junction
Box (CJB) (14A067)

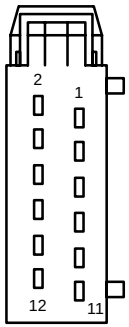


F12056

* 6.0L Diesel
** all others
*** TorqShift
† automatic transmission
†† manual transmission

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 140 (BK/PK) | Voltage supplied in reverse |
| 2 | 161 (DG/OG) | Headlamp, right (13008), (Low beam lamp feed) |
| 3 | 160 (DB/WH) | Headlamp, left (13008), (Low beam lamp feed) |
| 4 | *1155 (YE/BK) | Voltage in Run (overload protected) |
| 4 | **533 (TN/RD) | Voltage supplied at all times (overload protected) |
| 5 | 57 (BK) | Ground |
| 6 | **1093 (TN/RD) | Power, Hot in Start with Park or Neutral |
| 6 | ***33 (WH/PK) | Voltage supplied in Start (overload protected) |
| 7 | 54 (LG/YE) | Voltage supplied at all times (overload protected) |
| 8 | 324 (YE/LG) | Switched ground |
| 9 | †262 (BN/PK) | Switched ground |
| 9 | ††57 (BK) | Ground |
| 10 | 926 (LB/OG) | Fuel pump relay, control |
| 11 | 57 (BK) | Ground |
| 12 | 321 (GY/WH) | A/C clutch relay, switched output |

## C270g

**12A581**

Central Junction
Box (CJB) (14A067)

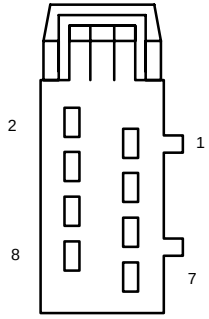


F08112

* 7.3L Diesel
** 6.0L Diesel

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 140 (BK/PK) | relay control battery feed |
| 2 | 113 (YE/LB) | Starter motor (11002), to, Starter relay (11450) |
| 3 | – | not used |
| 4 | 13 (RD/BK) | Power, Hot with Low Beams on |
| 5 | 22 (LB/BK) | Brake feed |
| 6 | 181 (BN/OG) | Voltage supplied at all times (overload protected) |
| 7 | 729 (RD/WH) | Voltage supplied at all times (overload protected) |
| 8 | *876 (DG/LG) | Power, from, Injector Driver Module (IDM) power relay |
| 8 | **16 (RD/LG) | relay control battery feed |