G101

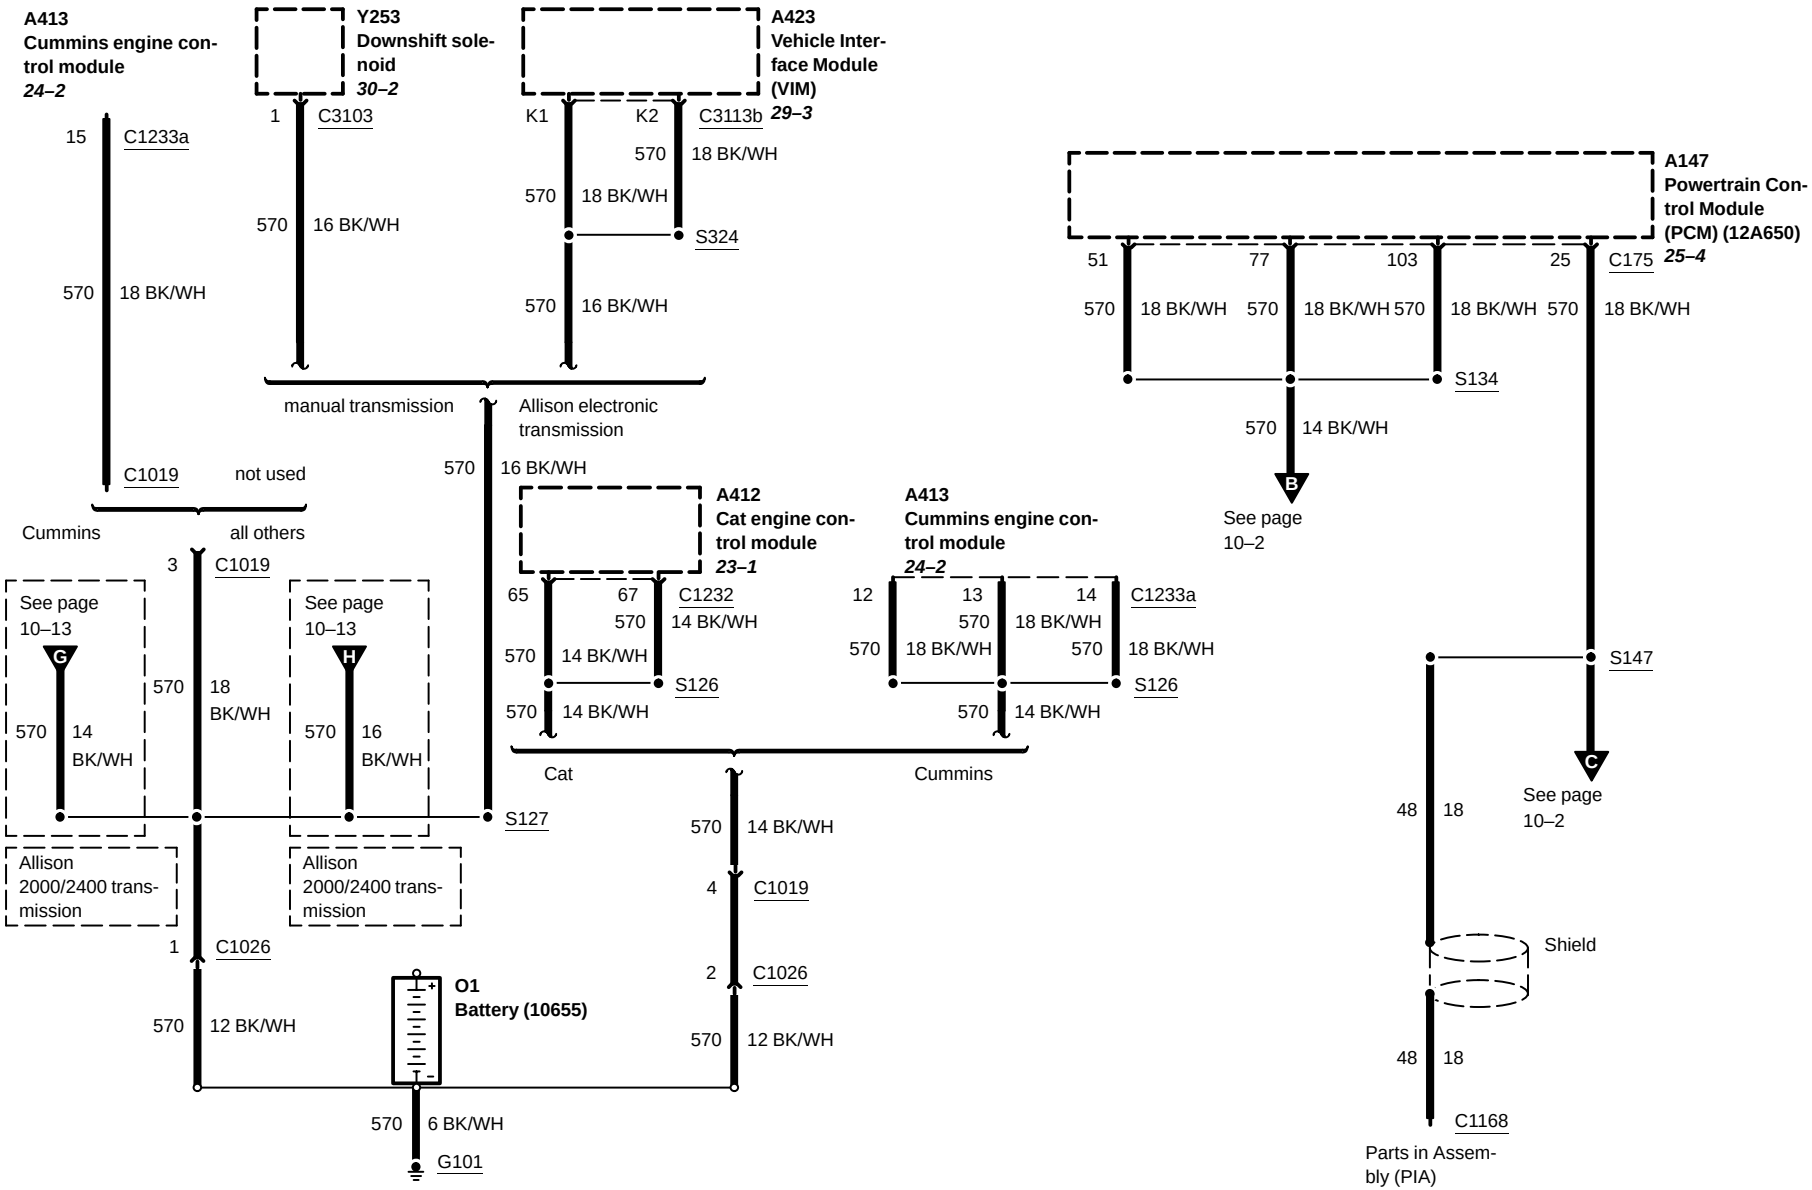
A413
Cummins engine control module
24–2
15
C1233a
570
18 BK/WH
C1019
not used
Cummins
all others
3
C1019
See page 10–13
G
570
14 BK/WH
570
18 BK/WH
See page 10–13
H
570
16 BK/WH
Allison 2000/2400 transmission
Allison 2000/2400 transmission
1
C1026
570
12 BK/WH
Y253
Downshift solenoid
30–2
1
C3103
570
16 BK/WH
A423
Vehicle Interface Module (VIM)
29–3
K1
K2
C3113b
570
18 BK/WH
570
18 BK/WH
S324
570
16 BK/WH
manual transmission
Allison electronic transmission
570
16 BK/WH
S127
A412
Cat engine control module
23–1
65
67
C1232
570
14 BK/WH
570
14 BK/WH
S126
570
14 BK/WH
Cat
A413
Cummins engine control module
24–2
12
13
14
C1233a
570
18 BK/WH
570
18 BK/WH
570
18 BK/WH
570
18 BK/WH
S126
570
14 BK/WH
Cummins
570
14 BK/WH
4
C1019
2
C1026
570
12 BK/WH
O1
Battery (10655)
570
6 BK/WH
G101
A147
Powertrain Control Module (PCM) (12A650)
25–4
51
77
103
25
C175
570
18 BK/WH
570
18 BK/WH
570
18 BK/WH
570
18 BK/WH
S134
570
14 BK/WH
B
See page 10–2
S147
C
See page 10–2
48
18
Shield
48
18
C1168
Parts in Assembly (PIA)