C118

* Marauder

12B637

Coil On Plug (COP)
8 (12A366)

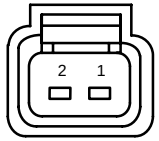

F02331

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
	*1029 (WH/RD)	Coil On Plug (COP) 8 (12A366), control
2	1029 (WH/RD)	Coil On Plug (COP) 8 (12A366), control
	*16 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C120 (BK)

* Marauder

12B637

Power steering
valve solenoid
(3783)

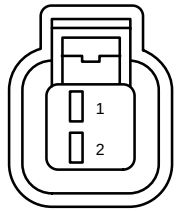

F02069

Pin	Circuit	Circuit function
1	115 (LG/BK)	Power steering valve solenoid (3783), –
	*114 (LB/YE)	Power steering valve solenoid (3783), +
2	114 (LB/YE)	Power steering valve solenoid (3783), +
	*115 (LG/BK)	Power steering valve solenoid (3783), –