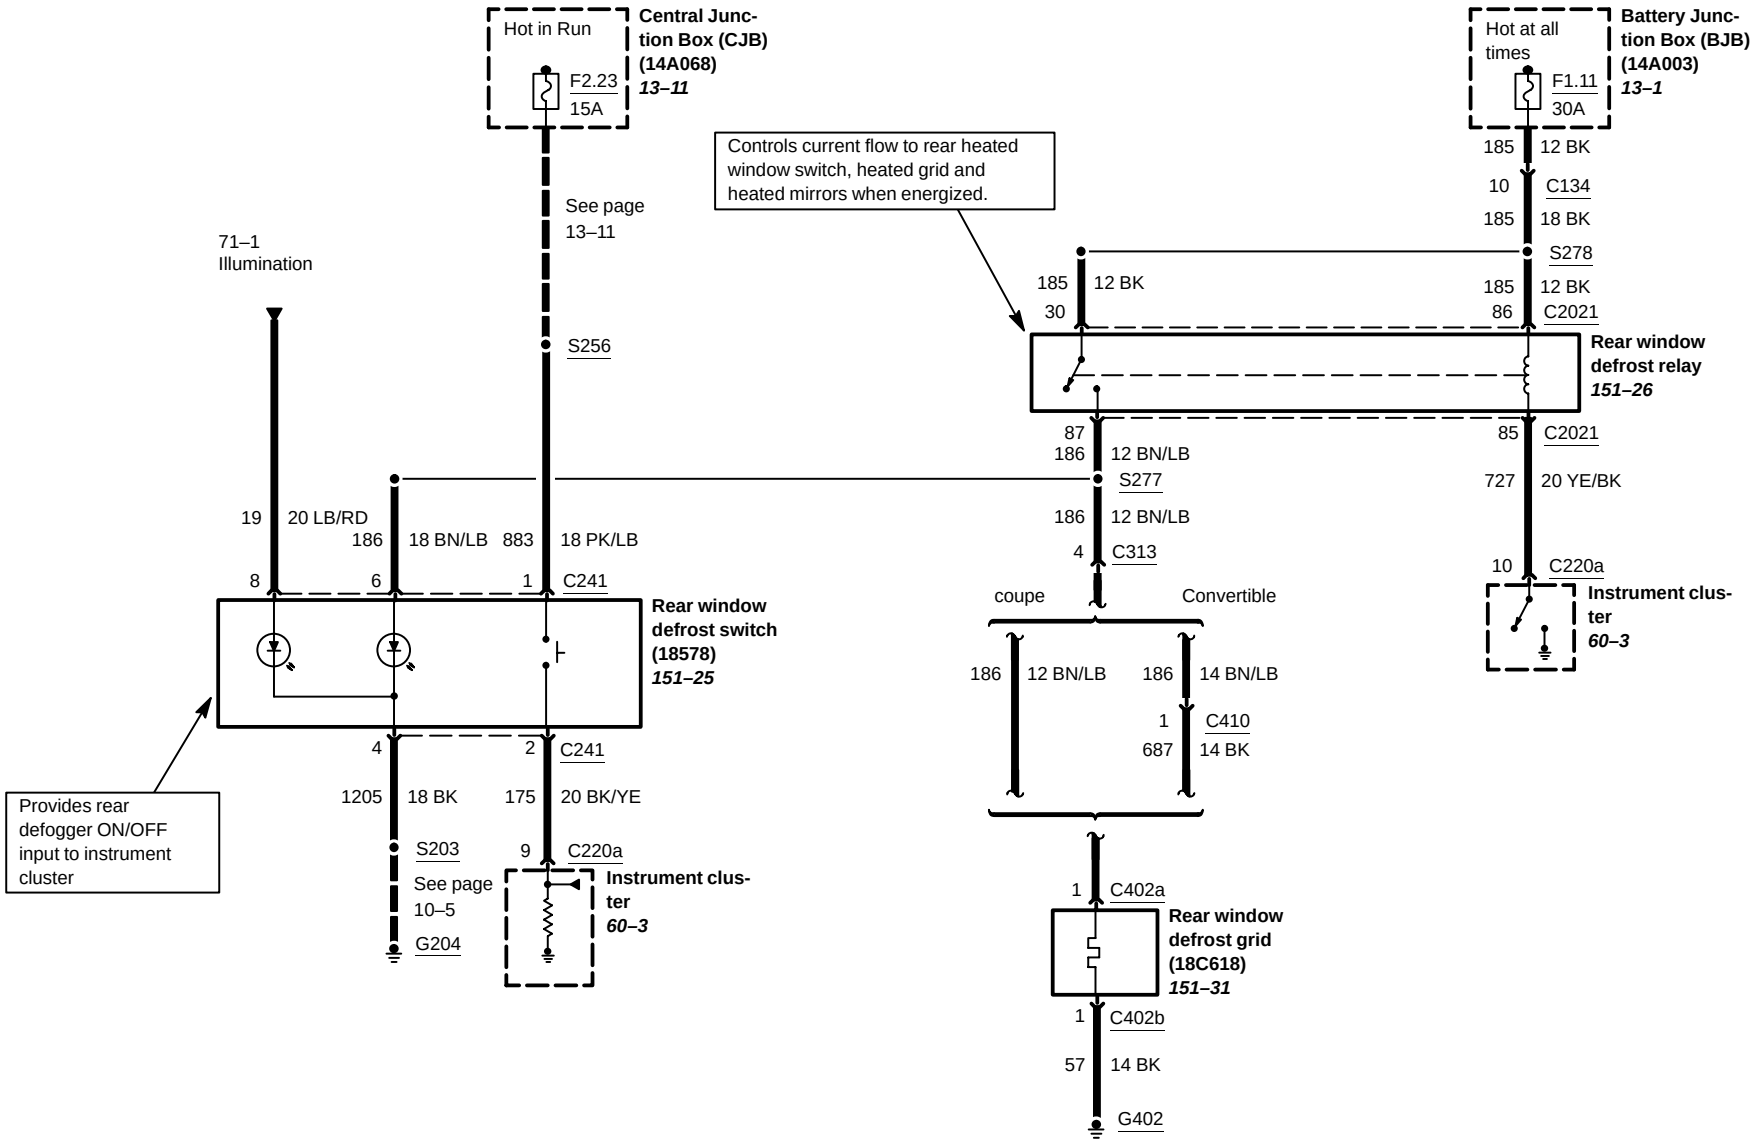
Hot in Run
F2.23
15A
Central Junction Box (CJB)
(14A068)
13–11
See page
13–11
S256
71–1
Illumination
19
20 LB/RD
8
186
18 BN/LB
6
883
18 PK/LB
1
C241
Rear window defrost switch
(18578)
151–25
4
2
C241
1205
18 BK
175
20 BK/YE
S203
9
C220a
See page
10–5
G204
Instrument cluster
60–3
Provides rear defogger ON/OFF input to instrument cluster
Controls current flow to rear heated window switch, heated grid and heated mirrors when energized.
Hot at all times
F1.11
30A
Battery Junction Box (BJB)
(14A003)
13–1
185
12 BK
10
C134
185
18 BK
S278
185
12 BK
30
185
12 BK
86
C2021
Rear window defrost relay
151–26
87
186
12 BN/LB
85
C2021
S277
727
20 YE/BK
186
12 BN/LB
4
C313
10
C220a
Instrument cluster
60–3
coupe
Convertible
186
12 BN/LB
186
14 BN/LB
1
C410
687
14 BK
1
C402a
Rear window defrost grid
(18C618)
151–31
1
C402b
57
14 BK
G402