C283 (BN)

N433
Steering wheel radio switch

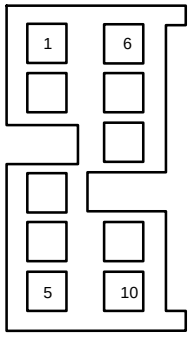

F10057

Pin	Circuit	Circuit Function
1	(RD)	Steering wheel radio switch +
2	(GN)	Steering wheel radio switch –
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	–	not used
8	–	not used
9	–	not used
10	–	not used

C284 (BK)

14N104

A17
Electronic flasher module

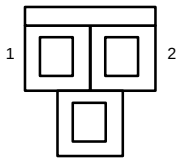

F03133

Pin	Circuit	Circuit Function
1	LB03 (OG)	Hazard flasher switch, switch sense
2	LBE7 (BK)	Ground
3	LB04 (VT)	Turn Signal and Hazard Lamps, switched power

C285 (WH)

13K197



F02129

14N104



F02173

C287 (WH)

13K197

B202
Autolamp sensor



F02129

Pin	Circuit	Circuit Function
1	LX03 (GN)	Autolamp sensor
2	LX07 (BK)	Autolamp sensor

C288 (WH)

14N104

N52
Rear window wiper/ washer switch

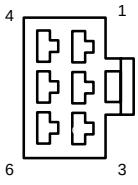

F06119

Pin	Circuit	Circuit Function
1	WB03 (BU)	Rear window washer pump motor, control
2	WBE1 (BK)	Ground
3	–	not used
4	IJ92 (PK/BK)	Illumination, Ground
5	IJ02 (PK)	Illumination, feed
6	WB08 (BU/YE)	wiper - Switched between: Battery voltage, Ground or Open