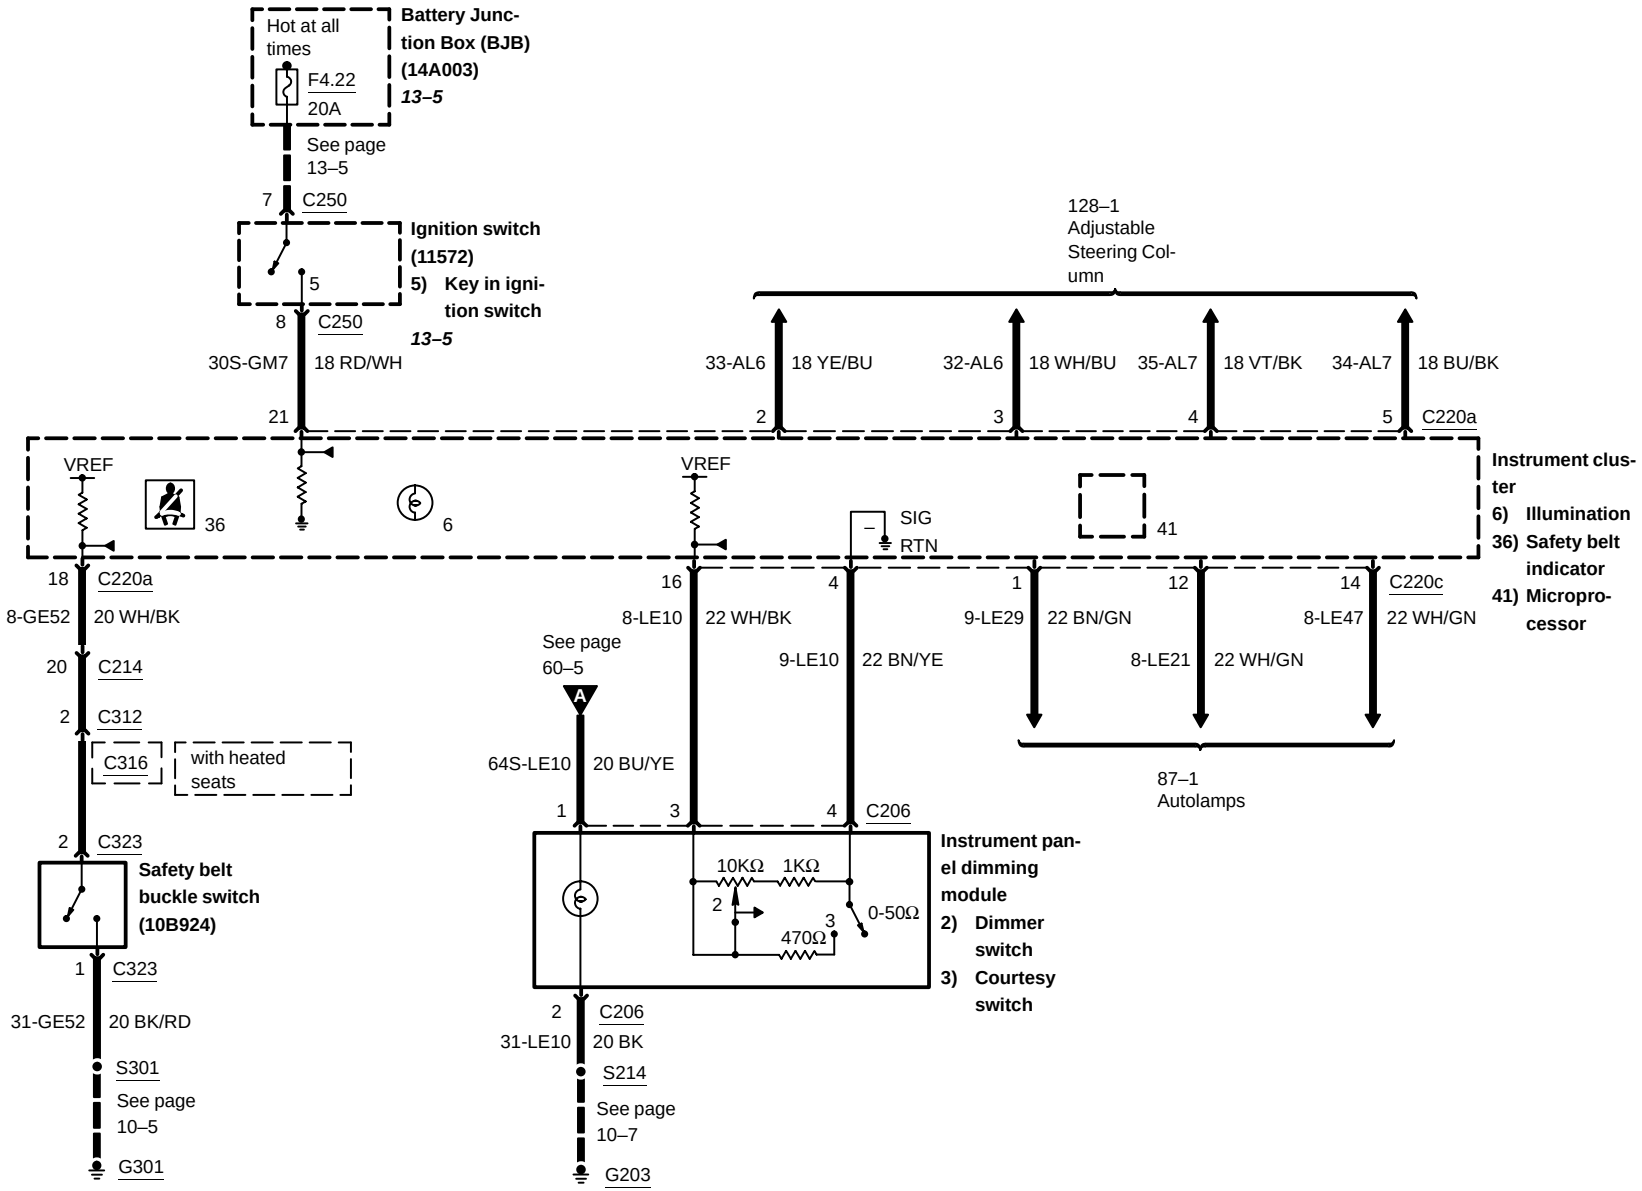
Hot at all times
F4.22
20A
Battery Junction Box (BJB) (14A003)
13–5
See page 13–5
7
C250
Ignition switch (11572)
5) Key in ignition switch
13–5
5
8
C250
30S-GM7
18 RD/WH
21
128–1 Adjustable Steering Column
33-AL6
18 YE/BU
32-AL6
18 WH/BU
35-AL7
18 VT/BK
34-AL7
18 BU/BK
2
3
4
5
C220a
Instrument cluster
6) Illumination
36) Safety belt indicator
41) Microprocessor
VREF
36
6
VREF
SIG RTN
41
18
C220a
8-GE52
20 WH/BK
20
C214
2
C312
C316
with heated seats
2
C323
Safety belt buckle switch (10B924)
1
C323
31-GE52
20 BK/RD
S301
See page 10–5
G301
16
4
1
12
14
C220c
8-LE10
22 WH/BK
9-LE10
22 BN/YE
9-LE29
22 BN/GN
8-LE21
22 WH/GN
8-LE47
22 WH/GN
See page 60–5
A
64S-LE10
20 BU/YE
1
3
4
C206
87–1 Autolamps
Instrument panel dimming module
2) Dimmer switch
3) Courtesy switch
10KΩ
1KΩ
2
3
0-50Ω
470Ω
2
C206
31-LE10
20 BK
S214
See page 10–7
G203