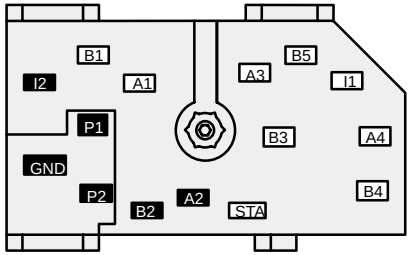


**C250 (BLACK)**
**IGNITION SWITCH**

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|
| A1 | 297 (BK/LG) | Power (Hot in Acc or Run) |
| A2 | – | NOT USED |
| A3 | 1040 (RD/BK) | Power (Hot in Run) |
| A4 | 687 (GY/YE) | Power (Hot in Run) |
| B1 | 37 (YE) | Power (Hot at All Times) |
| B2 | – | NOT USED |
| B3 | 37 (YE) | Power (Hot at All Times) |
| B4 | 1050 (LG/VT) | Power (Hot at All Times) |
| B5 | 1050 (LG/VT) | Power (Hot at All Times) |
| I1 | 964 (DB/LG) | Power (Hot in Start or Run) |
| I2 | – | NOT USED |
| P1 | – | NOT USED |
| P2 | – | NOT USED |
| STA | 32 (RD/LB) | Power (Hot in Start) |
| GND | – | NOT USED |

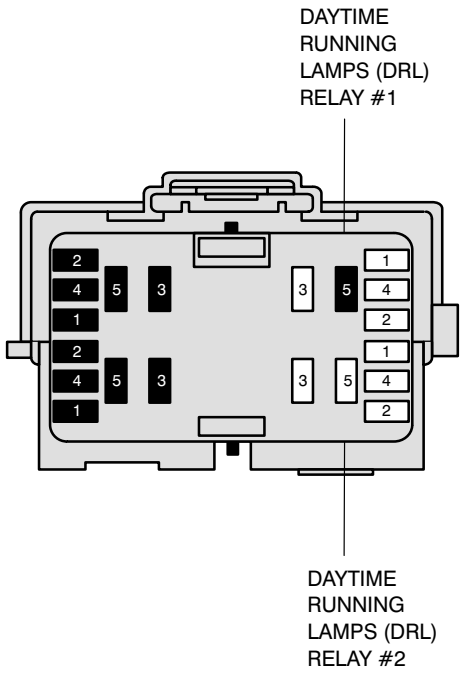


**DAYTIME RUNNING**
**LAMPS (DRL)**
**RELAY BLOCK**