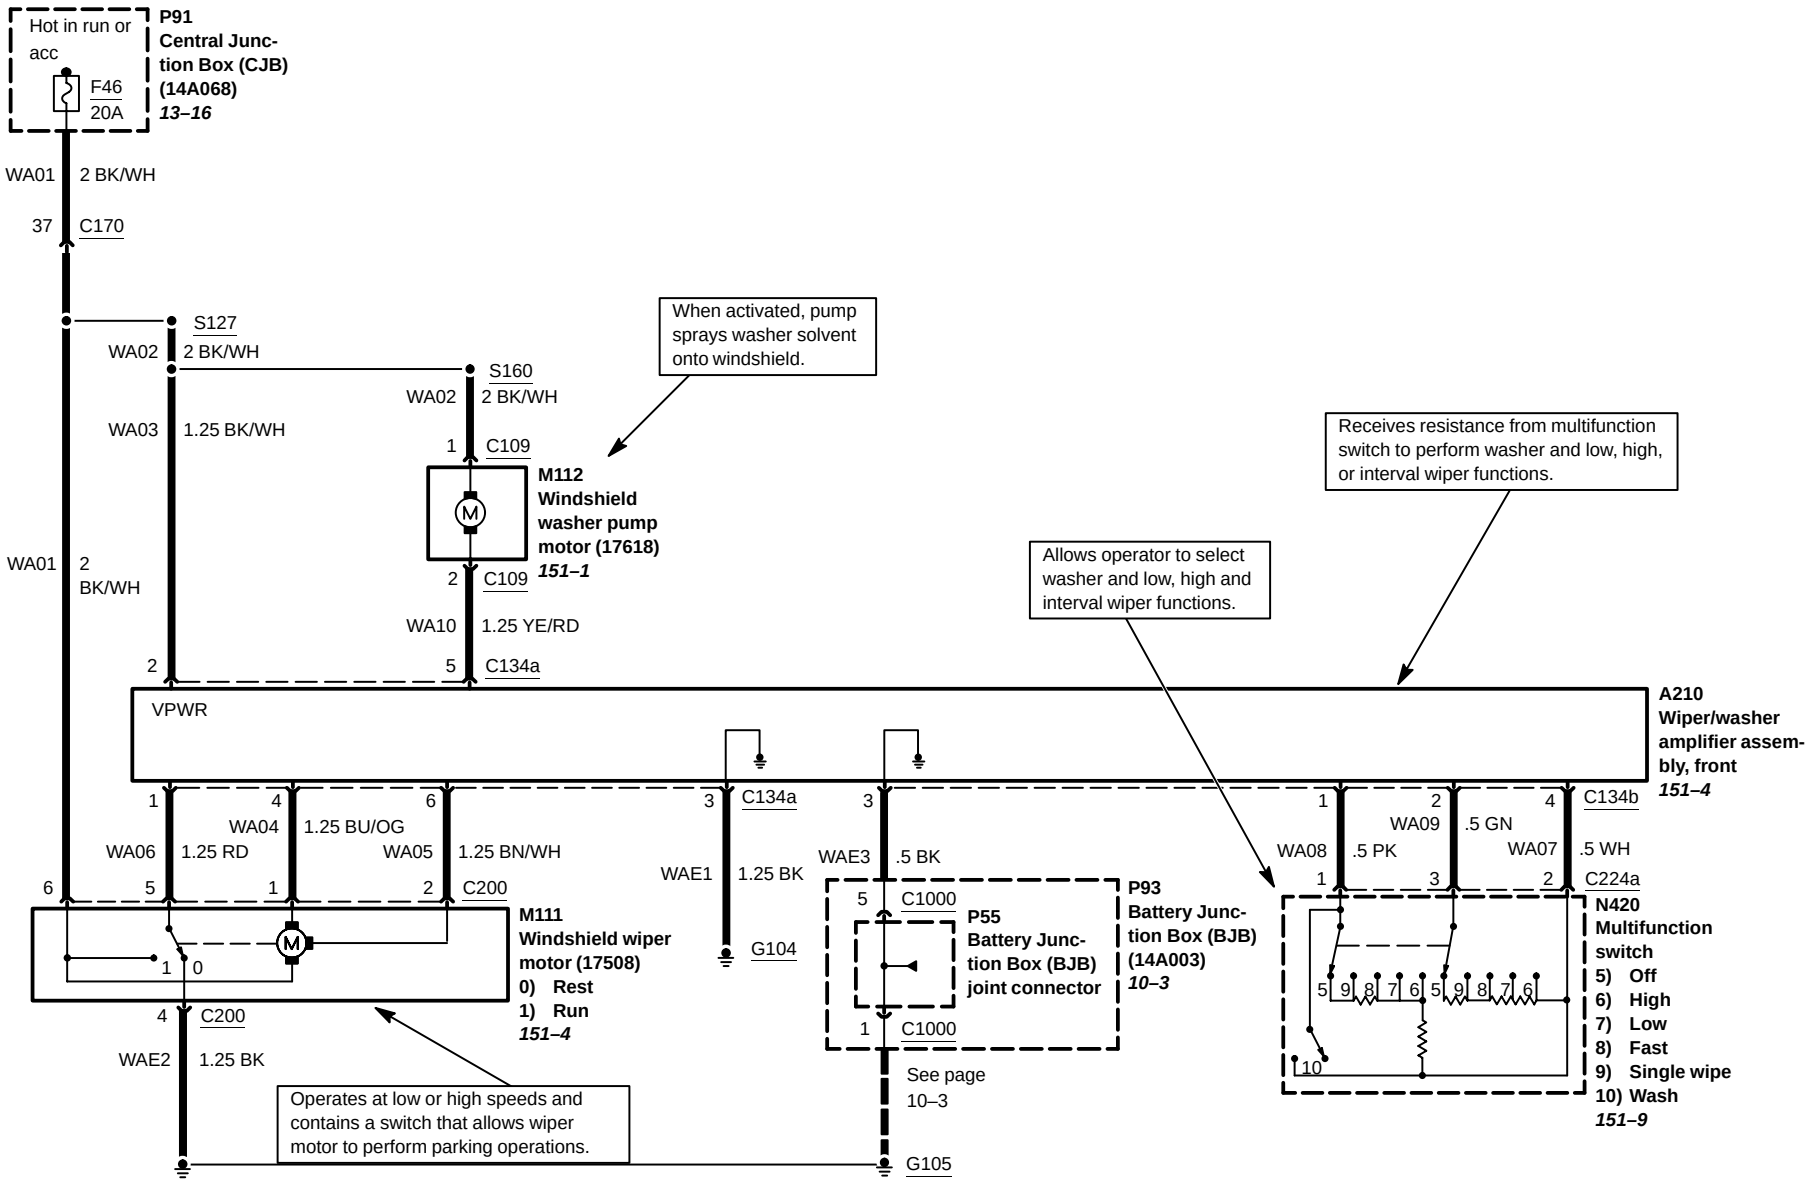
Hot in run or acc
F46
20A
P91
Central Junction Box (CJB)
(14A068)
13–16
WA01
2 BK/WH
37
C170
S127
WA02
2 BK/WH
When activated, pump sprays washer solvent onto windshield.
S160
WA02
2 BK/WH
WA03
1.25 BK/WH
1
C109
M112
Windshield washer pump motor (17618)
151–1
WA01
2
BK/WH
2
C109
WA10
1.25 YE/RD
2
5
C134a
Receives resistance from multifunction switch to perform washer and low, high, or interval wiper functions.
Allows operator to select washer and low, high and interval wiper functions.
VPWR
A210
Wiper/washer amplifier assembly, front
151–4
1
4
6
WA04
1.25 BU/OG
WA06
1.25 RD
WA05
1.25 BN/WH
6
5
1
2
C200
3
C134a
WAE1
1.25 BK
G104
3
WAE3
.5 BK
5
C1000
P55
Battery Junction Box (BJB) joint connector
1
C1000
P93
Battery Junction Box (BJB)
(14A003)
10–3
1
2
4
C134b
WA09
.5 GN
WA08
.5 PK
WA07
.5 WH
1
3
2
C224a
N420
Multifunction switch
5) Off
6) High
7) Low
8) Fast
9) Single wipe
10) Wash
151–9
M111
Windshield wiper motor (17508)
0) Rest
1) Run
151–4
1
0
4
C200
WAE2
1.25 BK
See page 10–3
Operates at low or high speeds and contains a switch that allows wiper motor to perform parking operations.
G105