C411

14A005

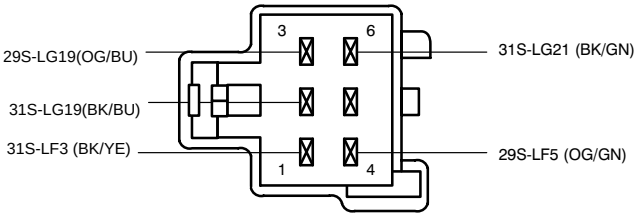

F06201

13A409

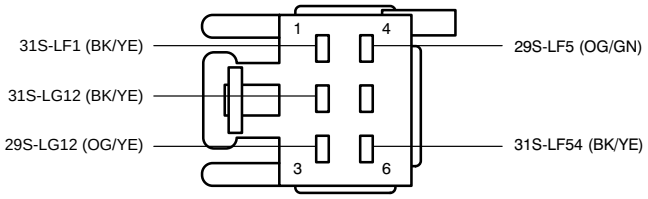

F06167

C412

13A409

E206
Tail lamp, left

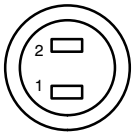

F02063

Pin	Circuit	Circuit Function
1	29S-LF11 (OG/WH)	Voltage supplied at all times (overload protected), Switched
2	31S-LF11 (BK/WH)	Ground, Switched

C413

13A409

E49
Turn lamp, left rear

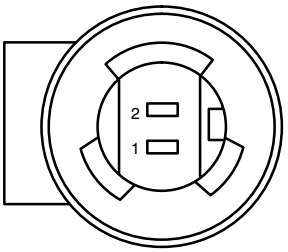

F02079

Pin	Circuit	Circuit Function
1	29S-LG12 (OG/YE)	Voltage supplied at all times (overload protected), Switched
2	31S-LG12 (BK/YE)	Ground, Switched

C414

13A409

E9
Lamp assembly, left rear

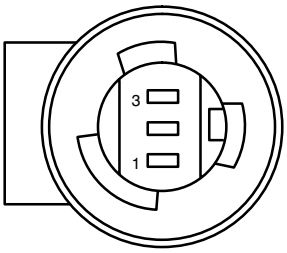

F03113

Pin	Circuit	Circuit Function
1	29S-LF23 (OG)	Voltage supplied at all times (overload protected), Switched
2	31S-LF11A (BK/WH)	Ground, Switched
3	31S-LG14 (BK/OG)	Ground, Switched

C415

13A409

E207
Tail lamp, right

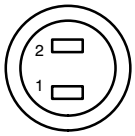

F02063

Pin	Circuit	Circuit Function
1	29S-LF11 (OG/WH)	Voltage supplied at all times (overload protected), Switched
2	31S-LF11 (BK/WH)	Ground, Switched