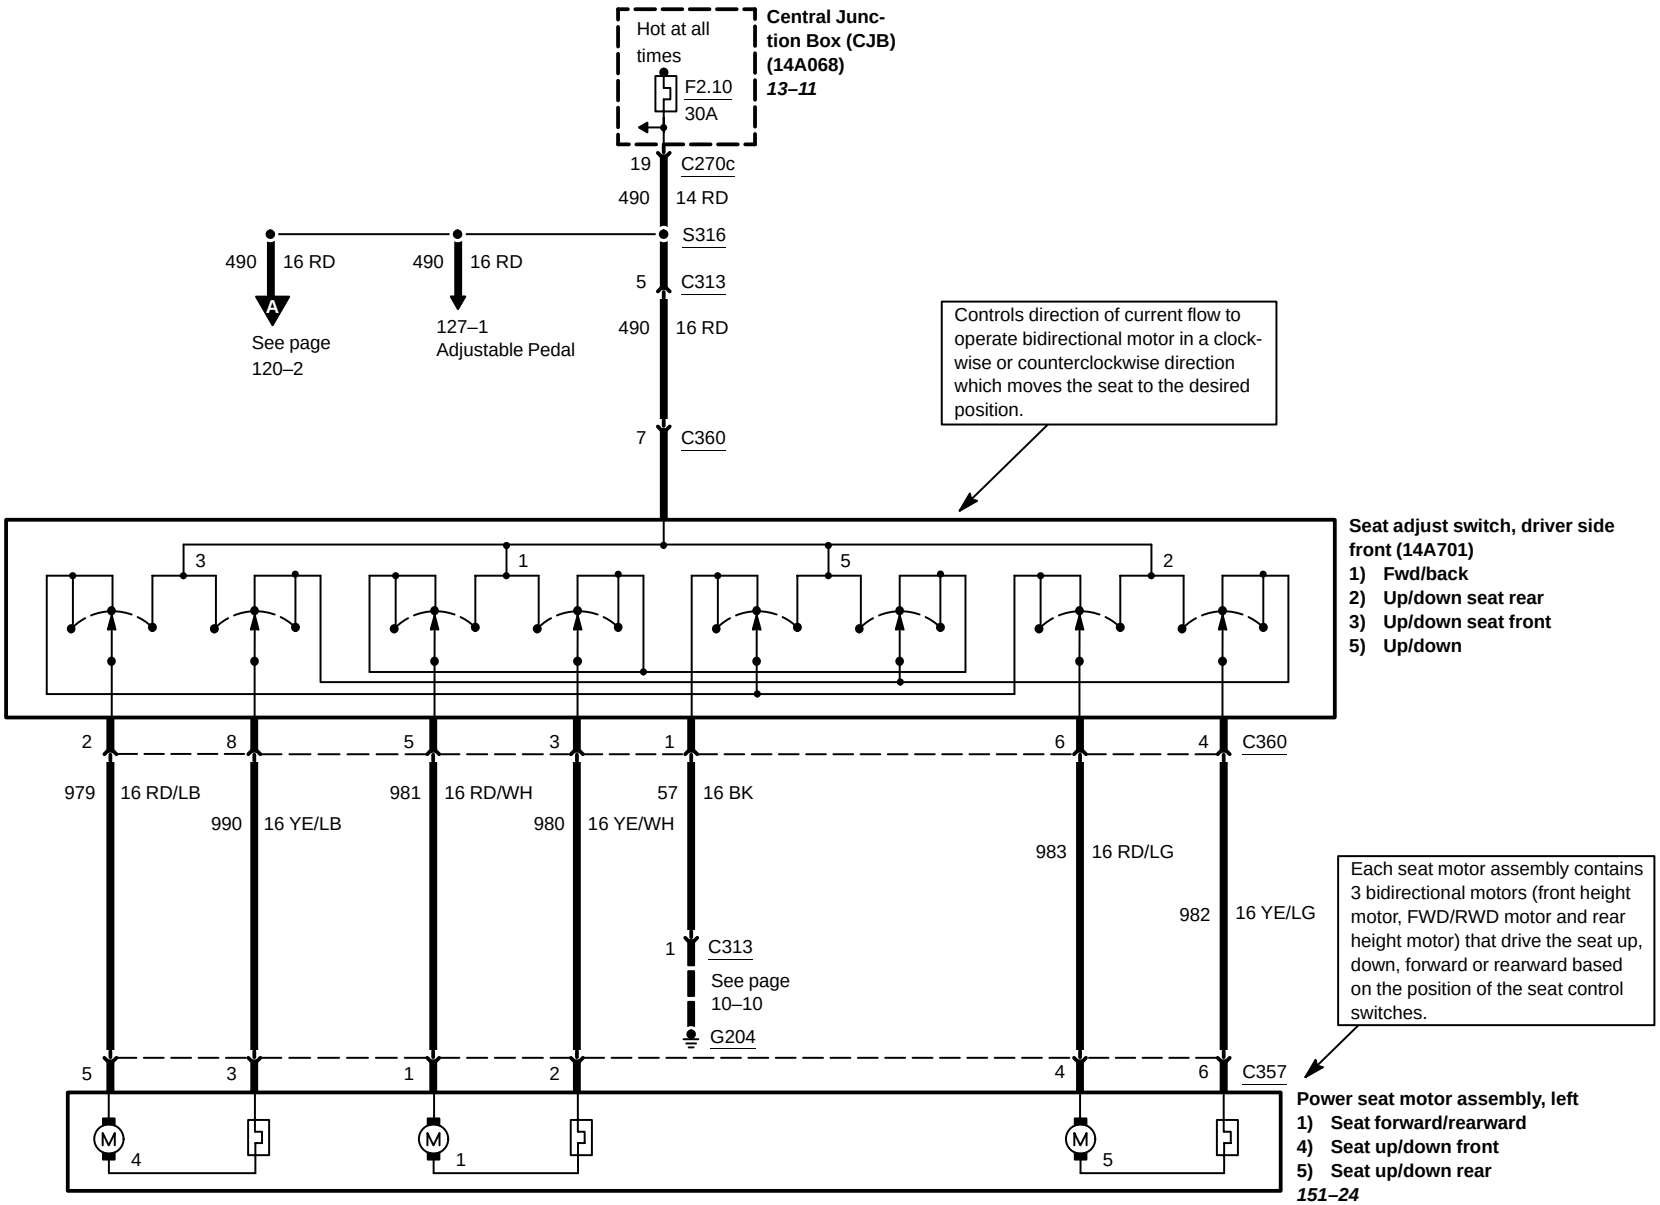
Hot at all times
F2.10
30A
Central Junction Box (CJB) (14A068)
13–11
19 C270c
490 14 RD
S316
490 16 RD
A
See page 120–2
490 16 RD
127–1 Adjustable Pedal
5 C313
490 16 RD
7 C360
Controls direction of current flow to operate bidirectional motor in a clockwise or counterclockwise direction which moves the seat to the desired position.
Seat adjust switch, driver side front (14A701)
1) Fwd/back
2) Up/down seat rear
3) Up/down seat front
5) Up/down
3 1 5 2
2 8 5 3 1 6 4 C360
979 16 RD/LB
990 16 YE/LB
981 16 RD/WH
980 16 YE/WH
57 16 BK
983 16 RD/LG
982 16 YE/LG
1 C313
See page 10–10
G204
5 3 1 2 4 6 C357
Each seat motor assembly contains 3 bidirectional motors (front height motor, FWD/RWD motor and rear height motor) that drive the seat up, down, forward or rearward based on the position of the seat control switches.
Power seat motor assembly, left
1) Seat forward/rearward
4) Seat up/down front
5) Seat up/down rear
151–24
M 4
M 1
M 5