C310b (BK)

14A005

Restraints control module (14B321)

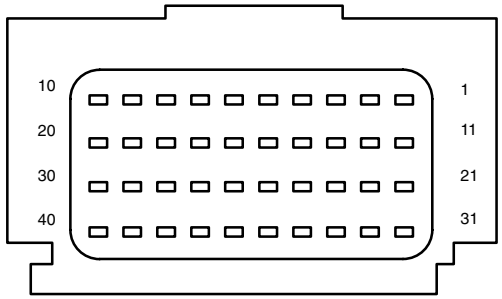

F40011

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	1257 (WH/LB)	Safety canopy, left, feed
4	1258 (RD)	Safety canopy, left, return
5	1259 (WH/YE)	Safety canopy, right, feed
6	1260 (BN/YE)	Safety canopy, right, return
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	1641 (VT)	Safety canopy sensor, left C–pillar, feed
14	1642 (DG/WH)	Safety canopy sensor, left C–pillar, return
15	1643 (WH/RD)	Safety canopy sensor, right C–pillar, feed
16	1644 (LB/WH)	Safety canopy sensor, right C–pillar, return
17	–	not used
18	–	not used
19	617 (PK/OG)	Forward crash sensor, feed
20	618 (VT/LG)	Forward crash sensor, return

Pin	Circuit	Circuit function
21	–	not used
22	–	not used
23	1520 (LG)	Seat position sensor, driver, feed
24	1558 (TN/BK)	Seat position sensor, driver, return
25	85 (BN/LB)	Safety belt buckle switch, driver, signal
26	1514 (RD/BK)	Safety belt buckle switch, passenger, signal
27	1261 (WH/LG)	Safety canopy sensor, left door, feed
28	1262 (BN/LG)	Safety canopy sensor, left door, return
29	1263 (WH)	Safety canopy sensor, right door, feed
30	1264 (BN)	Safety canopy sensor, right door, return
31	1079 (LG/RD)	Safety belt buckle pretensioner, driver, feed
32	1080 (LG/BK)	Safety belt buckle pretensioner, driver, return
33	1081 (YE/RD)	Safety belt buckle pretensioner, passenger, feed
34	1082 (YE/BK)	Safety belt buckle pretensioner, passenger, return
35	–	not used
36	–	not used
37	–	not used
38	–	not used
39	–	not used
40	–	not used