## C418

**14A005**

E221
Park/stop lamp, right rear

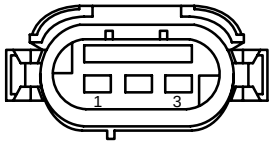


F03099

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 14 (BN) | Power, Exterior lamps |
| 3 | 810 (RD/LG) | Brake pedal position switch (13480), input |

## C419

**14A005**

E215
Park/stop lamp, left rear

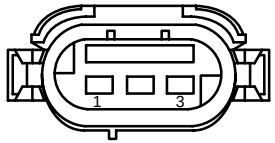


F03099

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 14 (BN) | Power, Exterior lamps |
| 3 | 810 (RD/LG) | Brake pedal position switch (13480), input |

## C423

**13412**

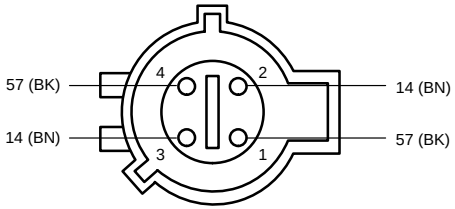


F04082

**14A005**

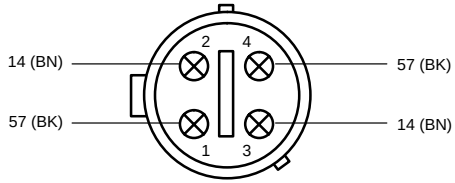


F04040

## C426 (BK)

**14A005**

B16
Wheel speed sensor, right rear

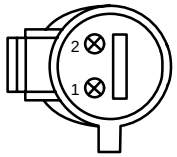


F02113

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 524 (PK/BK) | Wheel speed sensor, right rear - |
| 2 | 523 (RD/PK) | Wheel speed sensor, right rear + |

## C428

**14A005**

E57
Luggage compartment lamp (13A756)

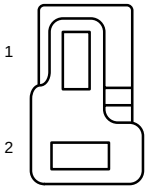


F02239

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 543 (DG) | Voltage supplied at all times (overload protected) |
| 2 | 55 (BK/PK) | Cargo lamp, output |