C385 (BK)

14K733

A7
ABS control module

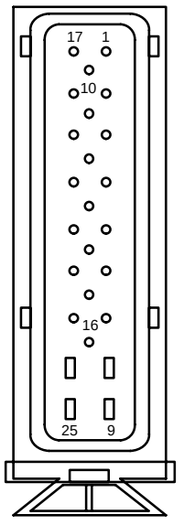

F25010

Pin	Circuit	Circuit Function
1	–	not used
2	15S-CF58 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
3	8-CF38 (WH/RD)	Sensor signal
4	7-CF38 (YE/RD)	Voltage D.C. supplied at all times (sensor)
5	–	not used
6	7-CF40 (YE/GN)	Voltage D.C. supplied at all times (sensor)
7	8-CF40 (WH/GN)	Sensor signal
8	91-CF6 (BN)	Ground
9	30-CF13 (RD)	Voltage supplied at all times (not overload protected)

Pin	Circuit	Circuit Function
10	–	not used
11	–	not used
12	–	not used
13	31S-CF45 (BK/GN)	Ground, switched
14	–	not used
15	–	not used
16	31S-CF28 (BK/RD)	Ground, switched
17	8-CF32 (WH)	Sensor signal
18	7-CF32 (YE)	Voltage D.C. supplied at all times (sensor)
19	–	not used
20	15-CF6A (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
21	8-CF34 (WH/BU)	Sensor signal
22	7-CF34 (YE/BU)	Voltage D.C. supplied at all times (sensor)
23	8-EE6A (WH)	Sensor signal
24	–	not used
25	30-CF6A (RD)	Voltage supplied at all times (not overload protected)

C390 (GN)

14401

A102
Passive anti–theft transceiver module

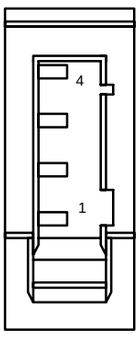

F04116

Pin	Circuit	Circuit Function
1	15-GL37A (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
2	91-GL1 (BN)	Ground
3	10-GL37 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
4	8-GL37 (WH/GN)	Sensor signal