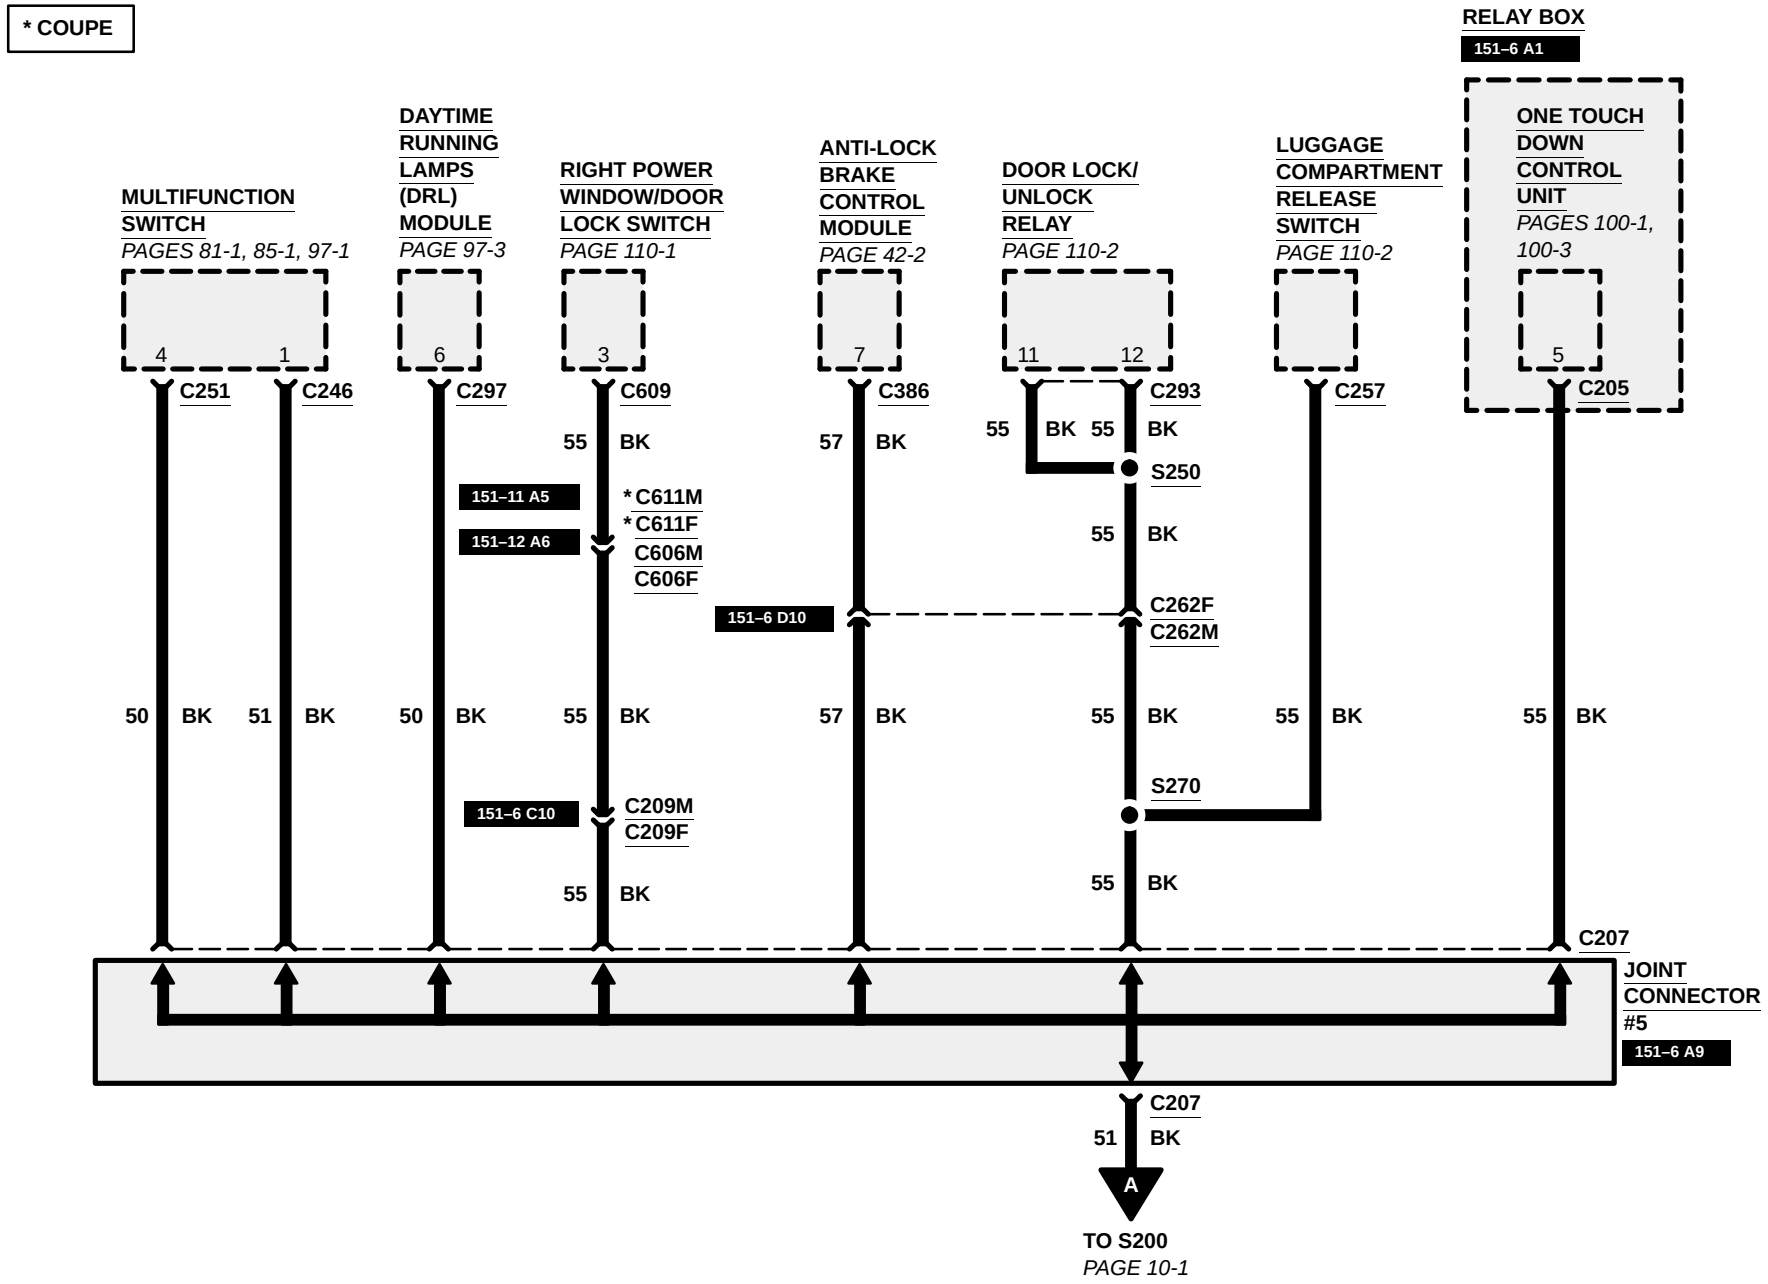
* COUPE
MULTIFUNCTION SWITCH
PAGES 81-1, 85-1, 97-1
DAYTIME RUNNING LAMPS (DRL) MODULE
PAGE 97-3
RIGHT POWER WINDOW/DOOR LOCK SWITCH
PAGE 110-1
ANTI-LOCK BRAKE CONTROL MODULE
PAGE 42-2
DOOR LOCK/ UNLOCK RELAY
PAGE 110-2
LUGGAGE COMPARTMENT RELEASE SWITCH
PAGE 110-2
RELAY BOX
151–6 A1
ONE TOUCH DOWN CONTROL UNIT
PAGES 100-1, 100-3
4
1
6
3
7
11
12
5
C251
C246
C297
C609
C386
C293
C257
C205
55 BK
57 BK
55 BK 55 BK
S250
151–11 A5
*C611M
*C611F
151–12 A6
C606M
C606F
55 BK
C262F
C262M
151–6 D10
50 BK
51 BK
50 BK
55 BK
57 BK
55 BK
55 BK
55 BK
S270
151–6 C10
C209M
C209F
55 BK
55 BK
C207
JOINT CONNECTOR #5
151–6 A9
C207
51 BK
A
TO S200
PAGE 10-1