-3

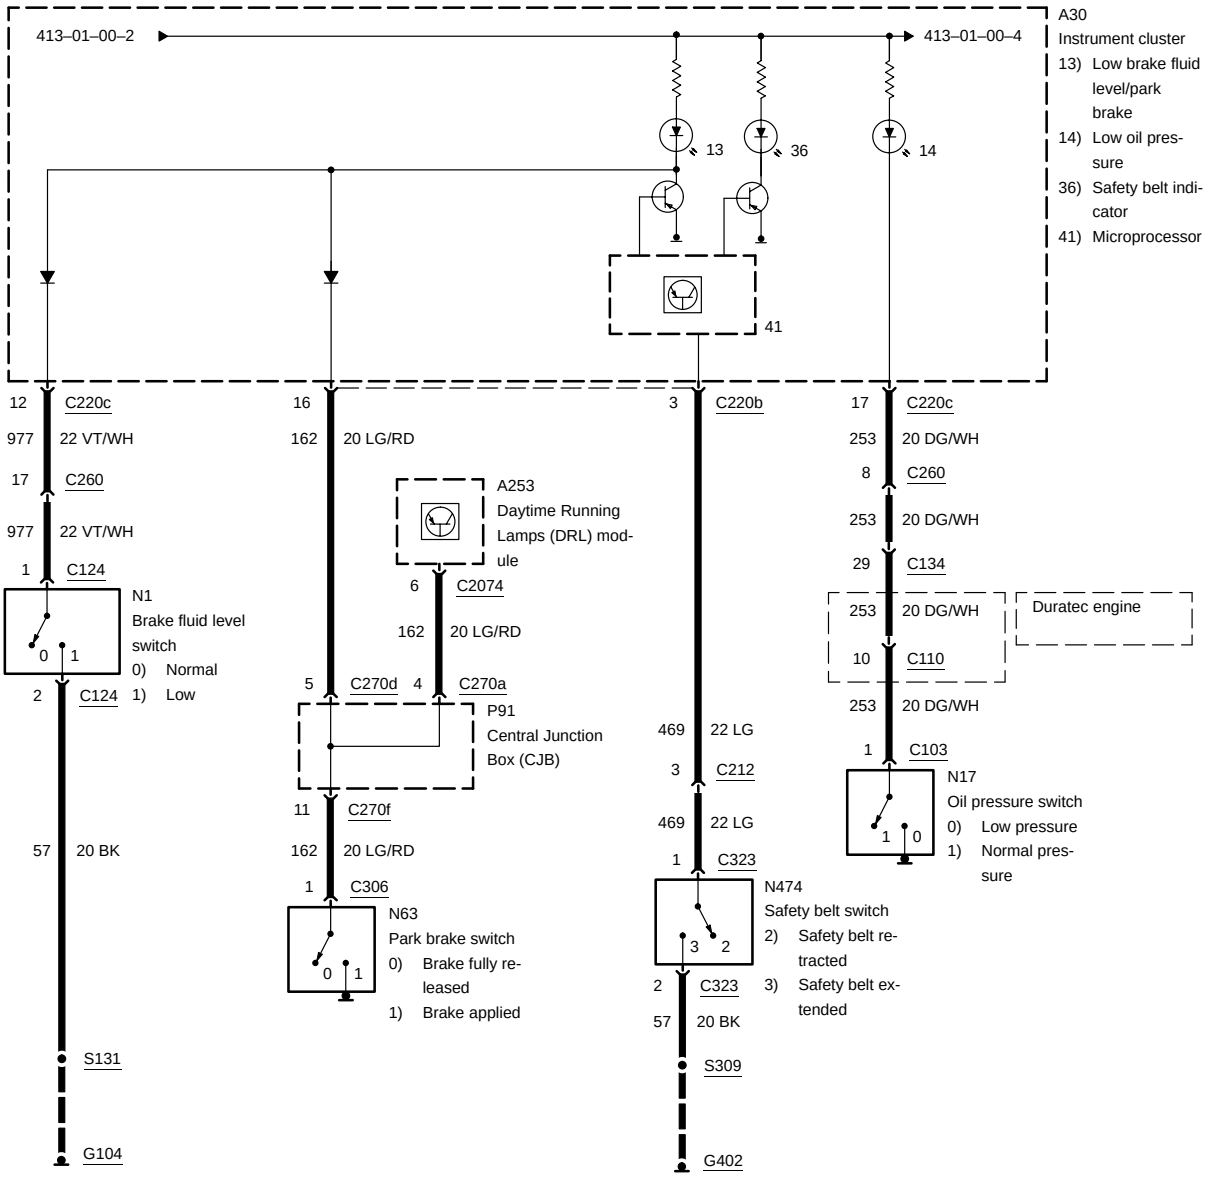
413–01–00–2
413–01–00–4
A30
Instrument cluster
13) Low brake fluid level/park brake
14) Low oil pressure
36) Safety belt indicator
41) Microprocessor
13
36
14
41
12 C220c
977 22 VT/WH
17 C260
977 22 VT/WH
1 C124
N1
Brake fluid level switch
0) Normal
1) Low
2 C124
57 20 BK
S131
G104
16
162 20 LG/RD
A253
Daytime Running Lamps (DRL) module
6 C2074
162 20 LG/RD
5 C270d 4 C270a
P91
Central Junction Box (CJB)
11 C270f
162 20 LG/RD
1 C306
N63
Park brake switch
0) Brake fully released
1) Brake applied
3 C220b
469 22 LG
3 C212
469 22 LG
1 C323
N474
Safety belt switch
2) Safety belt retracted
3) Safety belt extended
2 C323
57 20 BK
S309
G402
17 C220c
253 20 DG/WH
8 C260
253 20 DG/WH
29 C134
253 20 DG/WH
Duratec engine
10 C110
253 20 DG/WH
1 C103
N17
Oil pressure switch
0) Low pressure
1) Normal pressure