C220b

14401

A30
Instrument cluster

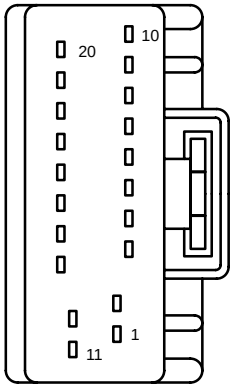

F20020

Pin	Circuit	Circuit function
1	12 (LG/BK)	Power, Hot with High Beams on
	1393 (LB/RD)	Turn lamps, feed, left front
2	2 (WH/LB)	Turn lamps, feed, right front
	1357 (LB/YE)	Fuel pump/fuel gauge sender, return
3	871 (YE)	Safety belt indicator, control
	608 (BK/YE)	Air bag indicator, control
4	210 (LB)	Four–wheel drive control module to Instrument cluster
	1356 (LG/VT)	Fuel pump/fuel gauge sender, input
5	603 (DG)	Anti–lock brake indicator, control
	31 (WH/RD)	Engine oil pressure indicator, control
6	999 (LB/WH)	GEM/Central security module door ajar, signal
	231 (BK/YE)	Message center switch to Instrument cluster
7	–	not used
	693 (OG)	UBP Diagnostics
8	162 (LG/RD)	Parking brake switch (15A851)
	914 (TN/OG)	SCP Bus +
9	–	not used
	915 (PK/LB)	SCP Bus –
10	343 (DB/LG)	Anti–theft, indicator, input
	234 (DB/WH)	Ambient air temperature sensor (19E702), return

Pin	Circuit	Circuit function
11	1205 (BK)	Ground
12	235 (RD/BK)	Instrument illumination, input
13	3 (LG/WH)	Turn lamps, feed, left front
	12 (LG/BK)	Power, Hot with High Beams on
14	608 (BK/YE)	Air bag indicator, control
	–	not used
15	81 (RD/LG)	Washer fluid level switch
	1414 (LG/VT)	voltage applied, Key In, Ignition switch (11572)
16	914 (TN/OG)	SCP Bus +
	703 (WH/OG)	Compass data +
17	915 (PK/LB)	SCP Bus –
	702 (WH/BK)	Compass data –
18	234 (DB/WH)	Ambient air temperature sensor (19E702), return
	295 (LB/PK)	Voltage in Run or Accessory (overload protected)
19	–	not used
	233 (DB/YE)	Ambient air temperature sensor (19E702), feed
20	1083 (LB/BK)	Air bag, tone driver
	–	not used