Seat adjust switch, driver side front (14A701)

Schematic

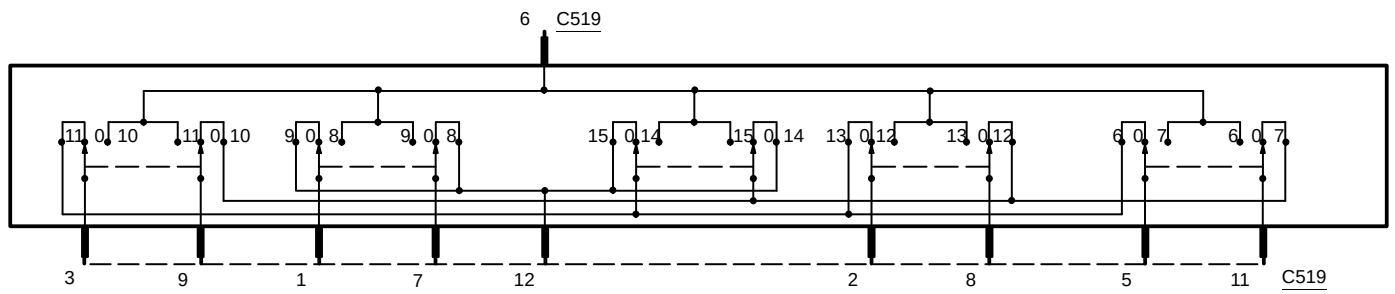

N216
Seat adjust switch, driver side front (14A701)
0) Rest
6) Backrest forward
7) Backrest rearward
8) Seat forward
9) Seat rearward
10) Front height up
11) Front height down
12) Rear height up
13) Rear height down
14) Entire seat up
15) Entire seat down

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Forward/Rearward Recliner Circuit	6 and 5	Forward	Closed circuit
	6 and 11	Rearward	Closed circuit
Forward/rearward circuit	6 and 1	Forward	Closed circuit
	6 and 7	Rearward	Closed circuit
Czech Republic Tilt Circuit	6 and 8	Down	Closed circuit
	6 and 2	Up	Closed circuit
front Tilt Circuit	6 and 9	Down	Closed circuit
	6 and 3	Up	Closed circuit
Power and Ground Checks Before Any Other Tests	12 and all others except 6	All switches at rest	Closed circuit
	6 and 12	All switches at rest	Closed circuit

Terminals
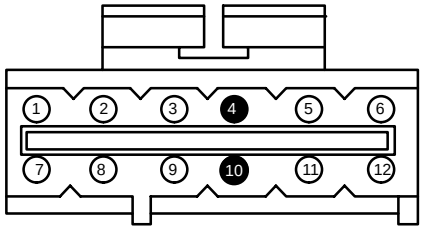
C519