C820

14632

N87
Door ajar switch, right rear

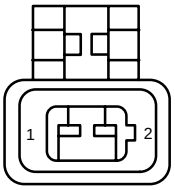

F02117

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	760 (PK/LB)	Door ajar switch, right rear

C907

14335

E30
Vanity mirror lamp, left

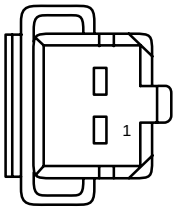

F02217

Pin	Circuit	Circuit Function
1	705 (LG/OG)	Battery saver relay, switched power
2	57 (BK)	Ground

C901 (NA)

14334

E208
Map reading lamp

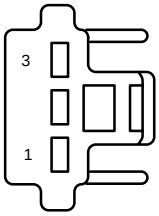

F03173

Pin	Circuit	Circuit Function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	57 (BK)	Ground
3	705 (LG/OG)	Battery saver relay, switched power

C912 (NA)

14334

N411
Roof opening panel switch

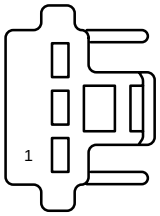

F03173

Pin	Circuit	Circuit Function
1	334 (RD/YE)	Window motor, feed, Down
2	691 (DB)	Window motor, feed, Open
3	333 (YE/RD)	Window motor, feed, Up

C918 (NA)

14334

E212
Interior lamps, front

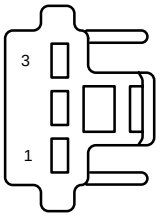

F03173

Pin	Circuit	Circuit Function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	57 (BK)	Ground
3	705 (LG/OG)	Battery saver relay, switched power

C906

14335

E31
Vanity mirror lamp, right

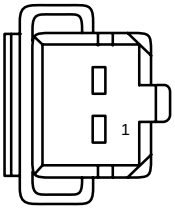

F02217

Pin	Circuit	Circuit Function
1	705 (LG/OG)	Battery saver relay, switched power
2	57 (BK)	Ground