C177 (BK)

14398

Front impact severity sensor

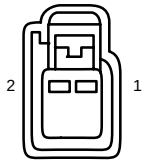

F02221

Pin	Circuit	Circuit function
1	618 (VT/LG)	Front impact severity sensor, return
2	617 (PK/OG)	Front impact severity sensor, feed

C179 (BK)

12B637

Electr. Vacuum Regulator (EVR) solenoid valve

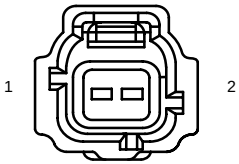

F02631

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	360 (BN/PK)	Electr. Vacuum Regulator (EVR) solenoid valve, signal, return

C180 (BK)

12B637

Camshaft position sensor (6B288)

F02371

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	795 (DG)	Camshaft position sensor (6B288) to Powertrain Control Module (PCM) (12A650)

C181 (GY)

12B637

Fuel injector 1 (9F593)



F02058

Pin	Circuit	Circuit function
1	555 (TN)	Fuel injector 1, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C182 (GY)

12B637

Fuel injector 2 (9F593)



F02058

Pin	Circuit	Circuit function
1	556 (WH)	Fuel injector 2, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C183 (GY)

12B637

Fuel injector 3 (9F593)



F02058

Pin	Circuit	Circuit function
1	557 (BN/YE)	Fuel injector 3, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)