C126 BK

14290

ABS test connector

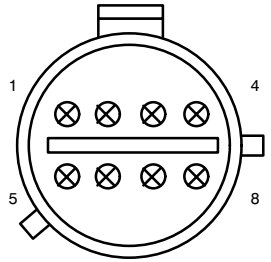

F08050

Pin	Circuit	Circuit function
1	4-CF53 (GY/WH)	Standard Corporate Protocol (SCP) data +
2	31-CF53A (BK/WH)	Ground
3	31-CF53B (BK/WH)	Ground
4	20-CF6 (PK/YE)	Voltage in Run (overload protected)
5	–	not used
6	30-CF53A (RD/WH)	Voltage supplied at all times (overload protected)
7	30-CF53B (RD/WH)	Voltage supplied at all times (overload protected)
8	20-CF6A (PK/YE)	ABS control module (2C219)

C128

14290

Mass Air Flow (MAF) sensor (12B579)

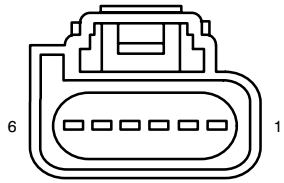

F06313

Pin	Circuit	Circuit function
1	8-RJ17 (WH/VT)	Intake Air Temperature (IAT) sensor (12A697), signal
2	9-RJ17 (BN/WH)	Intake Air Temperature (IAT) sensor (12A697), Signal return
3	8-RJ22 (WH/BU)	Mass Air Flow (MAF) sensor (12B579), signal
4	9-RJ22 (BN/BU)	Mass Air Flow (MAF) sensor (12B579), Signal return
5	31-RJ22 (BK/OG)	Ground
6	15S-RJ22 (GN/RD)	Voltage supplied in Start and Run (overload protected)

C127

14290

Anti–theft hood switch (19A434)

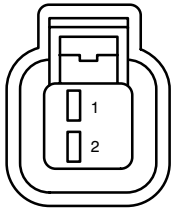

F02069

Pin	Circuit	Circuit function
1	8-GL7 (WH)	Anti–theft hood switch (19A434), switch sense
2	31-GL7 (BK/YE)	Ground

C131

14290

Horn (13832)

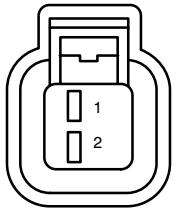

F02069

Pin	Circuit	Circuit function
1	30S-GJ6 (RD/YE)	Horn relay, switched power, output
2	31-GJ6 (BK/WH)	Ground