Ignition switch (11572)

Schematic

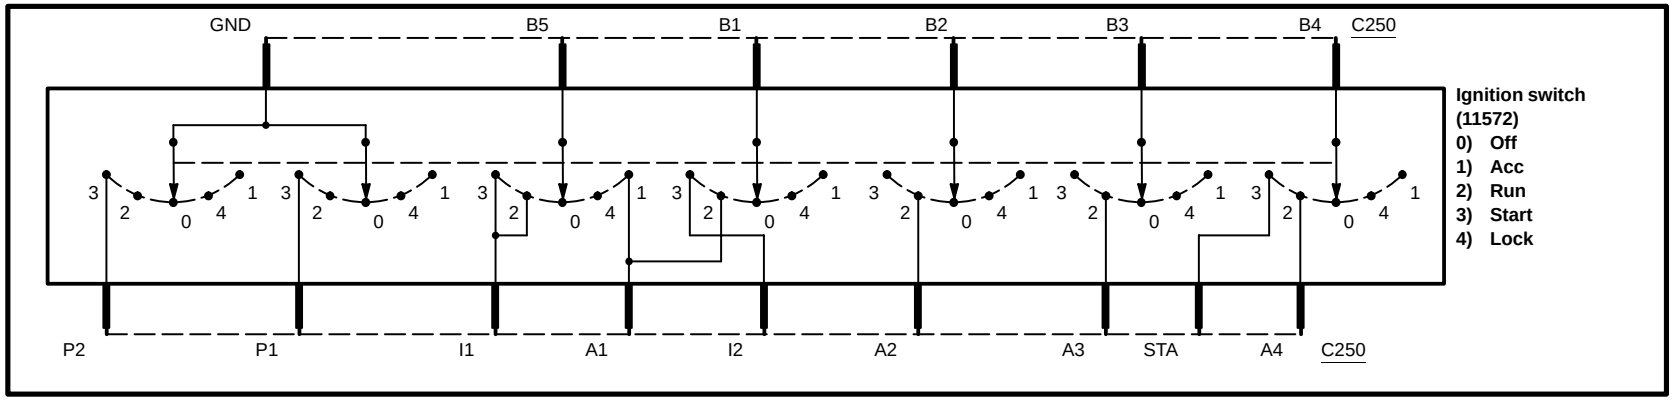

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move key to these positions	A good switch will indicate
Run power circuit	B2 and A2 B3 and A3 B4 and A4 B1 and A1	Off/Lock	Open circuit
		Accessory	Open circuit
		Run	Closed circuit
		Start	Open circuit
Run/Start power cir-cuit	B5 and I1	Off/Lock	Open circuit
		Accessory	Open circuit
		Run	Closed circuit
		Start	Closed circuit
Run/Acc power circuit	B5 and A1	Off/Lock	Open circuit
		Accessory	Closed circuit
		Run	Open circuit
		Start	Open circuit
	B1 and A1	Off/Lock	Open circuit
		Accessory	Open circuit
		Run	Closed circuit
		Start	Open circuit
Start power circuit	GND and P2 GND and P1 B1 and I2 B4 and STA	Off/Lock	Open circuit
		Accessory	Open circuit
		Run	Open circuit
		Start	Closed circuit
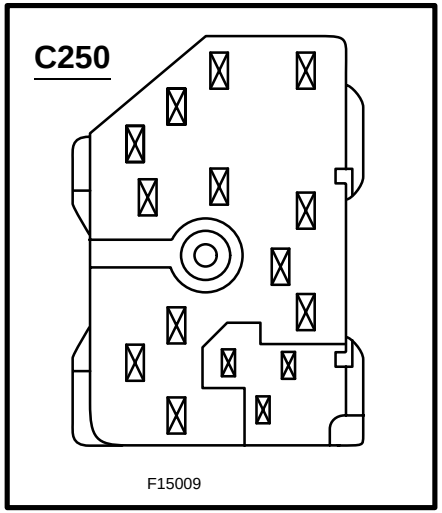
Terminals