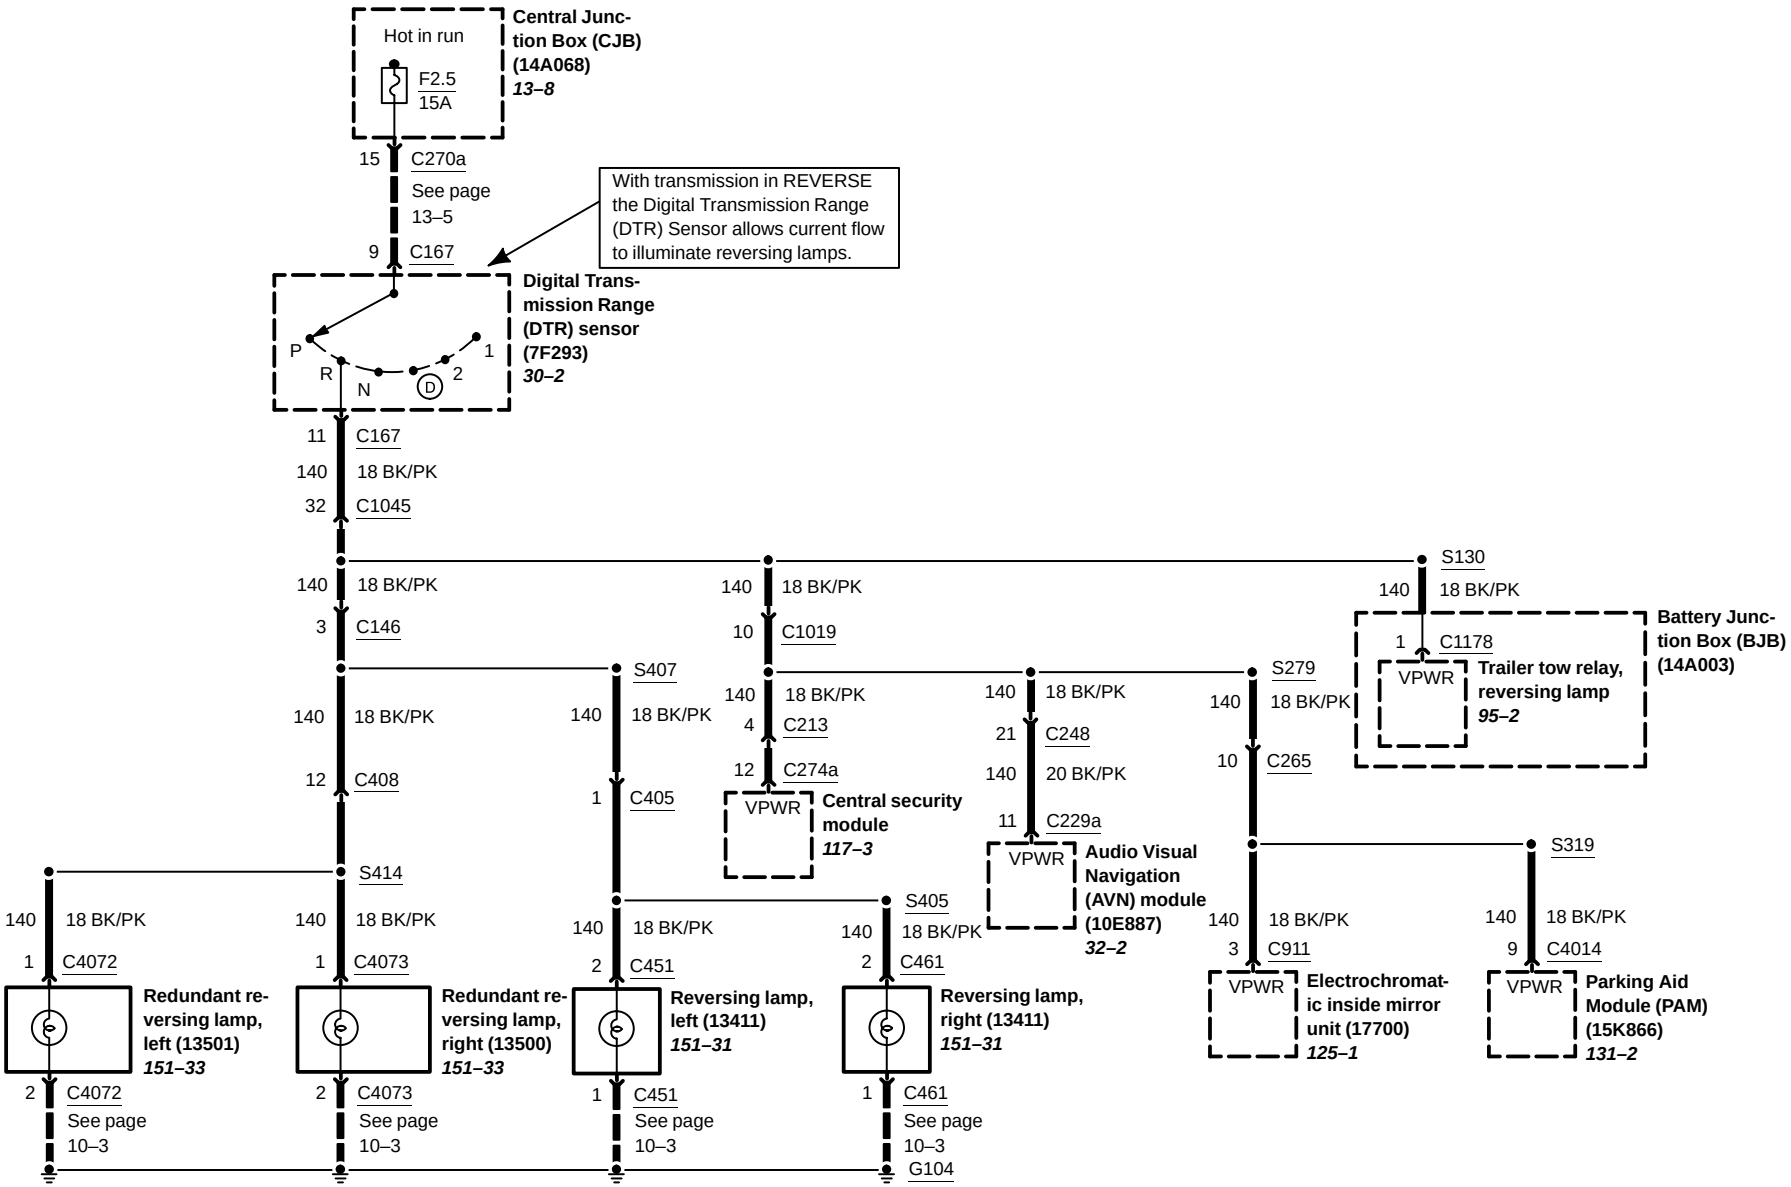
Hot in run
F2.5
15A
Central Junction Box (CJB) (14A068) 13–8
15 C270a
See page 13–5
9 C167
With transmission in REVERSE the Digital Transmission Range (DTR) Sensor allows current flow to illuminate reversing lamps.
P R N D 1 2
Digital Transmission Range (DTR) sensor (7F293) 30–2
11 C167
140 18 BK/PK
32 C1045
140 18 BK/PK
3 C146
140 18 BK/PK
12 C408
S414
140 18 BK/PK
1 C4072
2 C4072
See page 10–3
Redundant reversing lamp, left (13501) 151–33
140 18 BK/PK
1 C4073
2 C4073
See page 10–3
Redundant reversing lamp, right (13500) 151–33
S407
140 18 BK/PK
1 C405
140 18 BK/PK
2 C451
1 C451
See page 10–3
Reversing lamp, left (13411) 151–31
140 18 BK/PK
10 C1019
140 18 BK/PK
4 C213
12 C274a
VPWR
Central security module 117–3
S405
140 18 BK/PK
2 C461
1 C461
See page 10–3
G104
Reversing lamp, right (13411) 151–31
140 18 BK/PK
21 C248
140 20 BK/PK
11 C229a
VPWR
Audio Visual Navigation (AVN) module (10E887) 32–2
S279
140 18 BK/PK
10 C265
140 18 BK/PK
3 C911
VPWR
Electrochromatic inside mirror unit (17700) 125–1
S130
140 18 BK/PK
1 C1178
VPWR
Trailer tow relay, reversing lamp 95–2
Battery Junction Box (BJB) (14A003)
S319
140 18 BK/PK
9 C4014
VPWR
Parking Aid Module (PAM) (15K866) 131–2