C1290 (BK)

14B110

4x2 center axle disconnect solenoid

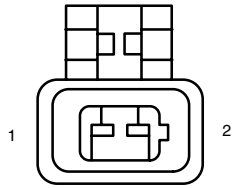

F02117

Pin	Circuit	Circuit function
1	145 (GY/BK)	4x2 center axle disconnect solenoid, control
2	294 (WH/LB)	Voltage in Run (overload protected)

C1291 (BK)

14B110

4x4 center axle disconnect solenoid

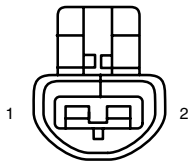

F02115

Pin	Circuit	Circuit function
1	605 (RD)	4x4 center axle disconnect solenoid, control
2	294 (WH/LB)	Voltage in Run (overload protected)

C1292 (BK)

12B637

Supercharger bypass solenoid

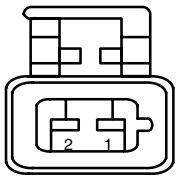

F02379

Pin	Circuit	Circuit function
1	965 (LG/VT)	Supercharger bypass solenoid, control
2	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)

C1293

12A581

Bi–Fuel power relay

* CNG
** Bi–Fuel

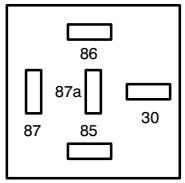

F05051

30	*787 (PK/BK)	Fuel pump, Power
	** (WH)	Voltage supplied at all times (overload protected)
85	*16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
	** (WH)	Voltage supplied in Start and Run (overload protected)
86	*2110 (YE/RD)	Bi–Fuel power relay, control
	** (WH)	Bi–Fuel power relay, control
87	*974 (OG)	Bi–Fuel power relay, switched output
	** (WH)	Bi–Fuel power relay, switched output
87A	–	not used