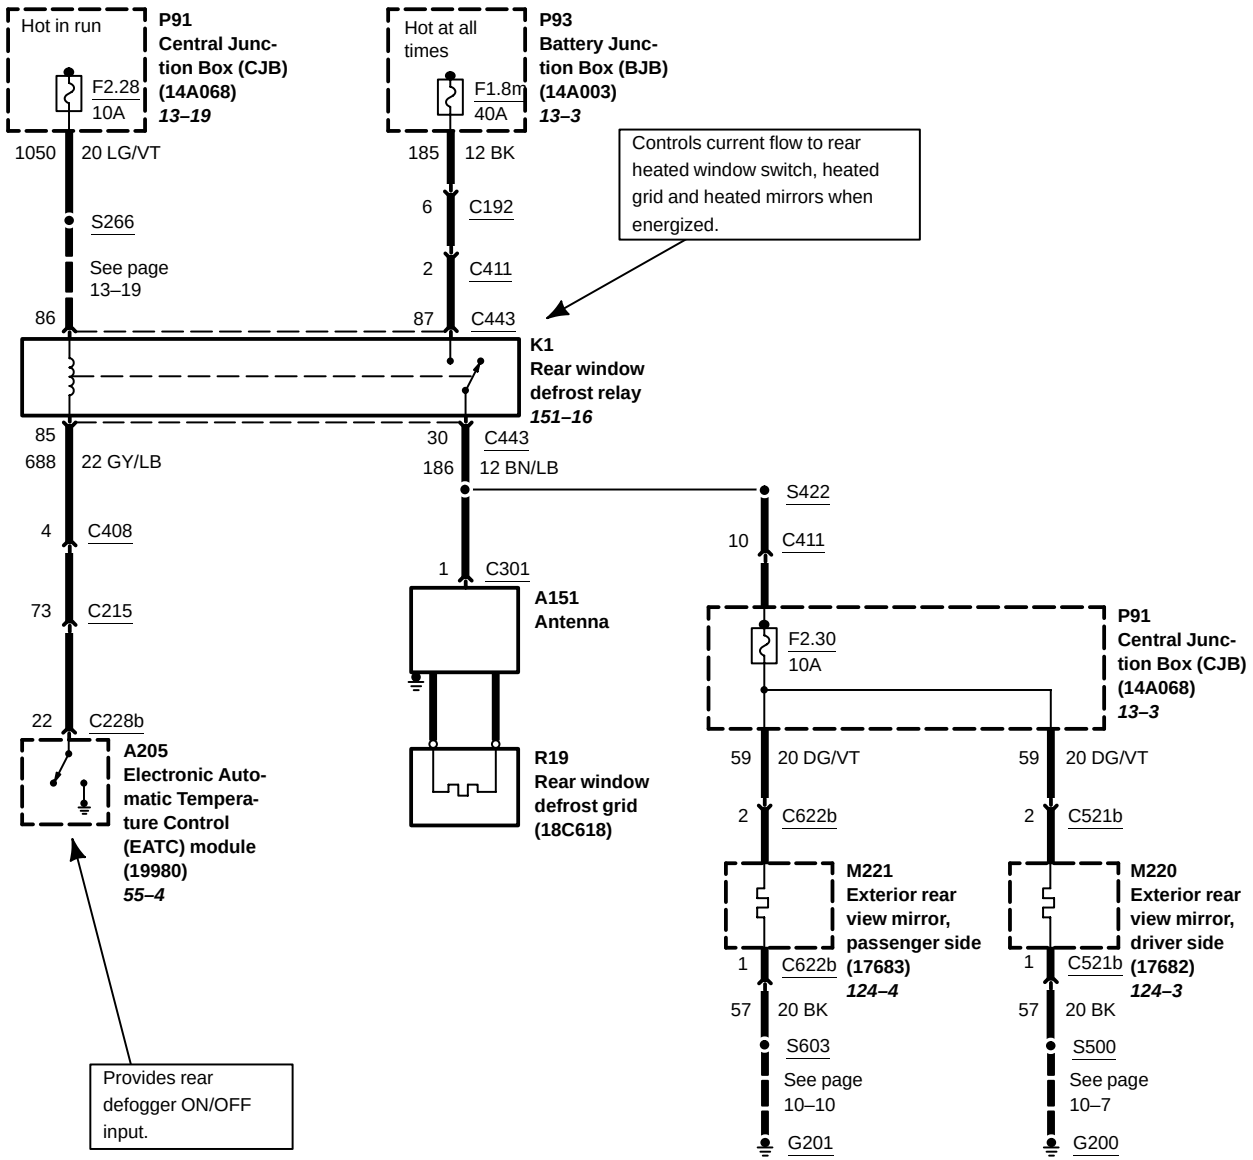
Hot in run
P91
Central Junction Box (CJB)
(14A068)
13–19
F2.28
10A
1050
20 LG/VT
S266
See page 13–19
86
Hot at all times
P93
Battery Junction Box (BJB)
(14A003)
13–3
F1.8m
40A
185
12 BK
6
C192
2
C411
87
C443
Controls current flow to rear heated window switch, heated grid and heated mirrors when energized.
K1
Rear window defrost relay
151–16
85
688
22 GY/LB
4
C408
73
C215
22
C228b
A205
Electronic Automatic Temperature Control (EATC) module
(19980)
55–4
Provides rear defogger ON/OFF input.
30
C443
186
12 BN/LB
1
C301
A151
Antenna
R19
Rear window defrost grid
(18C618)
S422
10
C411
P91
Central Junction Box (CJB)
(14A068)
13–3
F2.30
10A
59
20 DG/VT
2
C622b
M221
Exterior rear view mirror, passenger side
(17683)
124–4
1
C622b
57
20 BK
S603
See page 10–10
G201
59
20 DG/VT
2
C521b
M220
Exterior rear view mirror, driver side
(17682)
124–3
1
C521b
57
20 BK
S500
See page 10–7
G200