-2

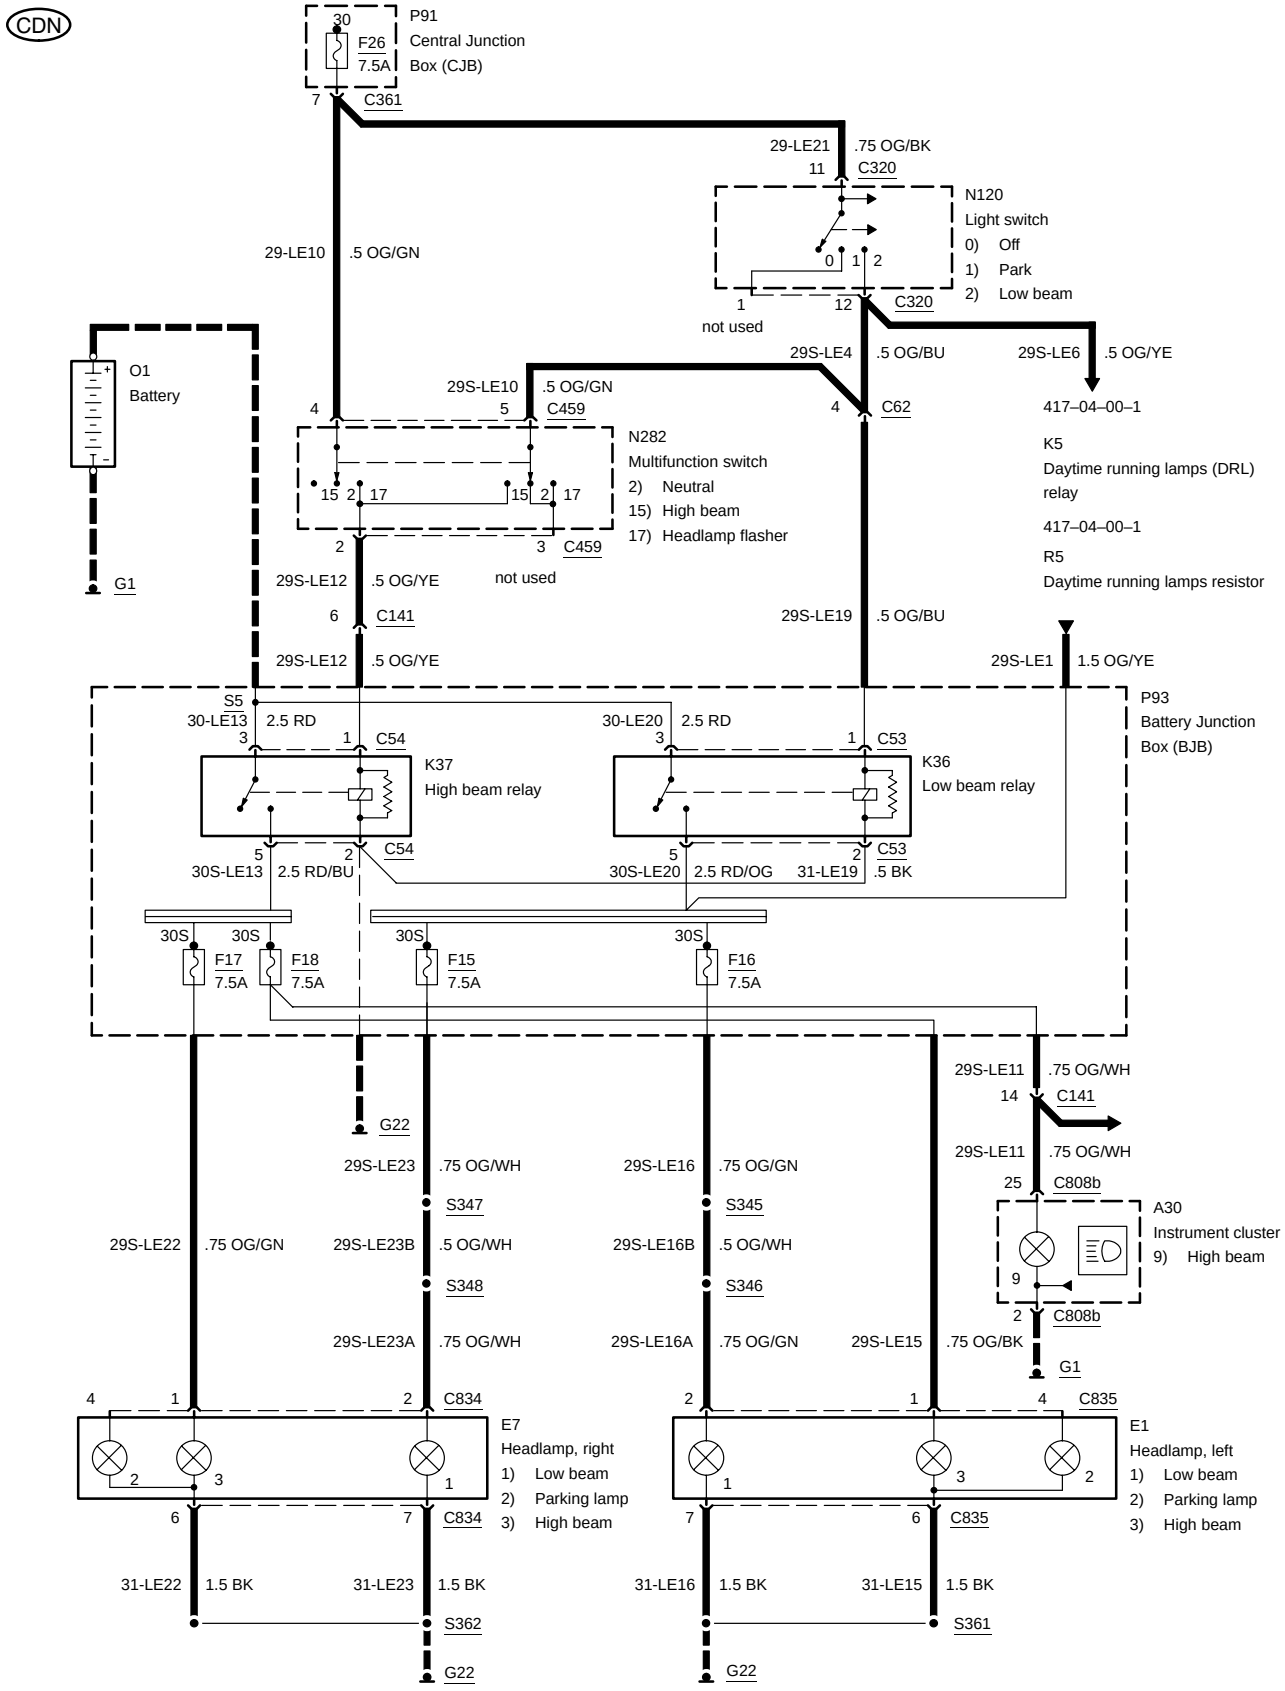
CDN
P91
Central Junction Box (CJB)
F26 7.5A
C361
29-LE21 .75 OG/BK
C320
N120
Light switch
0) Off
1) Park
2) Low beam
not used
29-LE10 .5 OG/GN
29S-LE4 .5 OG/BU
29S-LE6 .5 OG/YE
O1
Battery
G1
29S-LE10 .5 OG/GN
C459
C62
417–04–00–1
K5
Daytime running lamps (DRL) relay
N282
Multifunction switch
2) Neutral
15) High beam
17) Headlamp flasher
not used
R5
Daytime running lamps resistor
29S-LE12 .5 OG/YE
C141
29S-LE19 .5 OG/BU
29S-LE1 1.5 OG/YE
P93
Battery Junction Box (BJB)
S5
30-LE13 2.5 RD
30-LE20 2.5 RD
C54
C53
K37
High beam relay
K36
Low beam relay
30S-LE13 2.5 RD/BU
30S-LE20 2.5 RD/OG
31-LE19 .5 BK
F17 7.5A
F18 7.5A
F15 7.5A
F16 7.5A
G22
29S-LE11 .75 OG/WH
29S-LE23 .75 OG/WH
29S-LE16 .75 OG/GN
C808b
A30
Instrument cluster
9) High beam
S347
S345
29S-LE22 .75 OG/GN
29S-LE23B .5 OG/WH
29S-LE16B .5 OG/WH
S348
S346
29S-LE23A .75 OG/WH
29S-LE16A .75 OG/GN
29S-LE15 .75 OG/BK
C834
C835
E7
Headlamp, right
1) Low beam
2) Parking lamp
3) High beam
E1
Headlamp, left
1) Low beam
2) Parking lamp
3) High beam
31-LE22 1.5 BK
31-LE23 1.5 BK
31-LE16 1.5 BK
31-LE15 1.5 BK
S362
S361