C162

Cummins Engine Harness

ECM connector

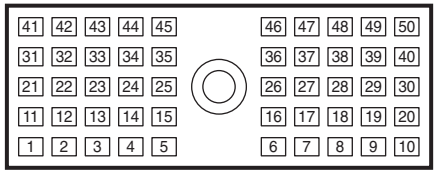

3555048C1

Pin	Circuit	Circuit Function
1	214 (PK/LB)	Idle validation switch
2	—	Not used
3	—	Not used
4	—	Not used
5	569 (DG)	Stoplamp (brake on/off) switch
6	—	Not used
7	—	Not used
8	—	Not used
9	216 (TN/RD)	Throttle sensor
10	712 (OG)	Engine diagnostic
11	213 (DB/YE)	Idle validation switch
12	—	Not used
13	—	Not used
14	—	Not used
15	306 (TN/LB)	Module, speed control to clutch switch
16	151 (LB/BK)	Speed control on-off switch to amplifier
17	—	Not used
18	1286 (RD/OG)	PCM - exhaust brake enable switch
19	—	Not used
20	716 (YE)	Engine diagnostic
21	—	Not used
22	357 (YE/WH)	Module, powertrain control to throttle position sensor
23	359 (GY/RD)	Sensor, signal return
24	848 (DG/OG)	Speed control switch to amplifier
25	154 (VT/LG)	Cruise control set switch

Pin	Circuit	Circuit Function
26	—	Not used
27	679 (GY/BK)	Vehicle speed signal - plus to module, powertrain control
28	794 (LB)	Low coolant level sensor
29	—	Not used
30	—	Not used
31	—	Not used
32	1203 (BK/LB)	Electronic module logic ground (type 2 ground)
33	—	Not used
34	21 (DG/LG)	Exhaust brake switch feed
35	—	Not used
36	—	Not used
37	—	Not used
38	—	Not used
39	16 (RD/LG)	Ignition switch to ignition coil 'batt' terminal
40	414 (OG/RD)	Air intake heater solenoid
41	648 (WH/PK)	Tachometer to rpm sensor, feed
42	—	Not used
43	617 (PK/DG)	Engine shut down lamp
44	656 (PK/LG)	Redundant module to engine warning lamp
45	—	Not used
46	1827 (WH/LG)	Data link connector -CAN H
47	1828 (PK/LG)	Data link connector -CAN L
48	—	Not used
49	—	Not used
50	464 (BK/PK)	Module to lamp