C3120 (GY)

14A005

Subwoofer, left rear



F02071

Pin	Circuit	Circuit function
1	822 (BK/LG)	Subwoofer amplifier, rear, to Subwoofer, +
2	287 (BK/WH)	Subwoofer amplifier, rear, to Subwoofer, –

C3121 (GY)

14A005

Subwoofer, right rear



F02071

Pin	Circuit	Circuit function
1	822 (BK/LG)	Subwoofer amplifier, rear, to Subwoofer +
2	287 (BK/WH)	Subwoofer amplifier, rear, to Subwoofer –

C4062 (WH)

14A005

Convertible top motor



F02088

Pin	Circuit	Circuit function
1	903 (RD)	Convertible top motor, to, Convertible top raise relay +/–
2	902 (YE)	Convertible top motor, to, Convertible top lower relay +/–

C4063 (BK)

14A005

Convertible top raise relay

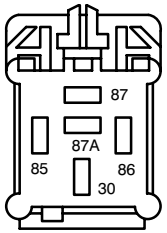

F05062

Pin	Circuit	Circuit function
30	903 (RD)	Convertible top motor, to, Convertible top raise relay +/–
85	977 (VT/WH)	Brake indicator, control
86	588 (VT)	Convertible top switch, to, Convertible top raise relay –VPWR
87	170 (RD/LB)	Voltage supplied at all times (overload protected)
87A	1205 (BK)	Ground