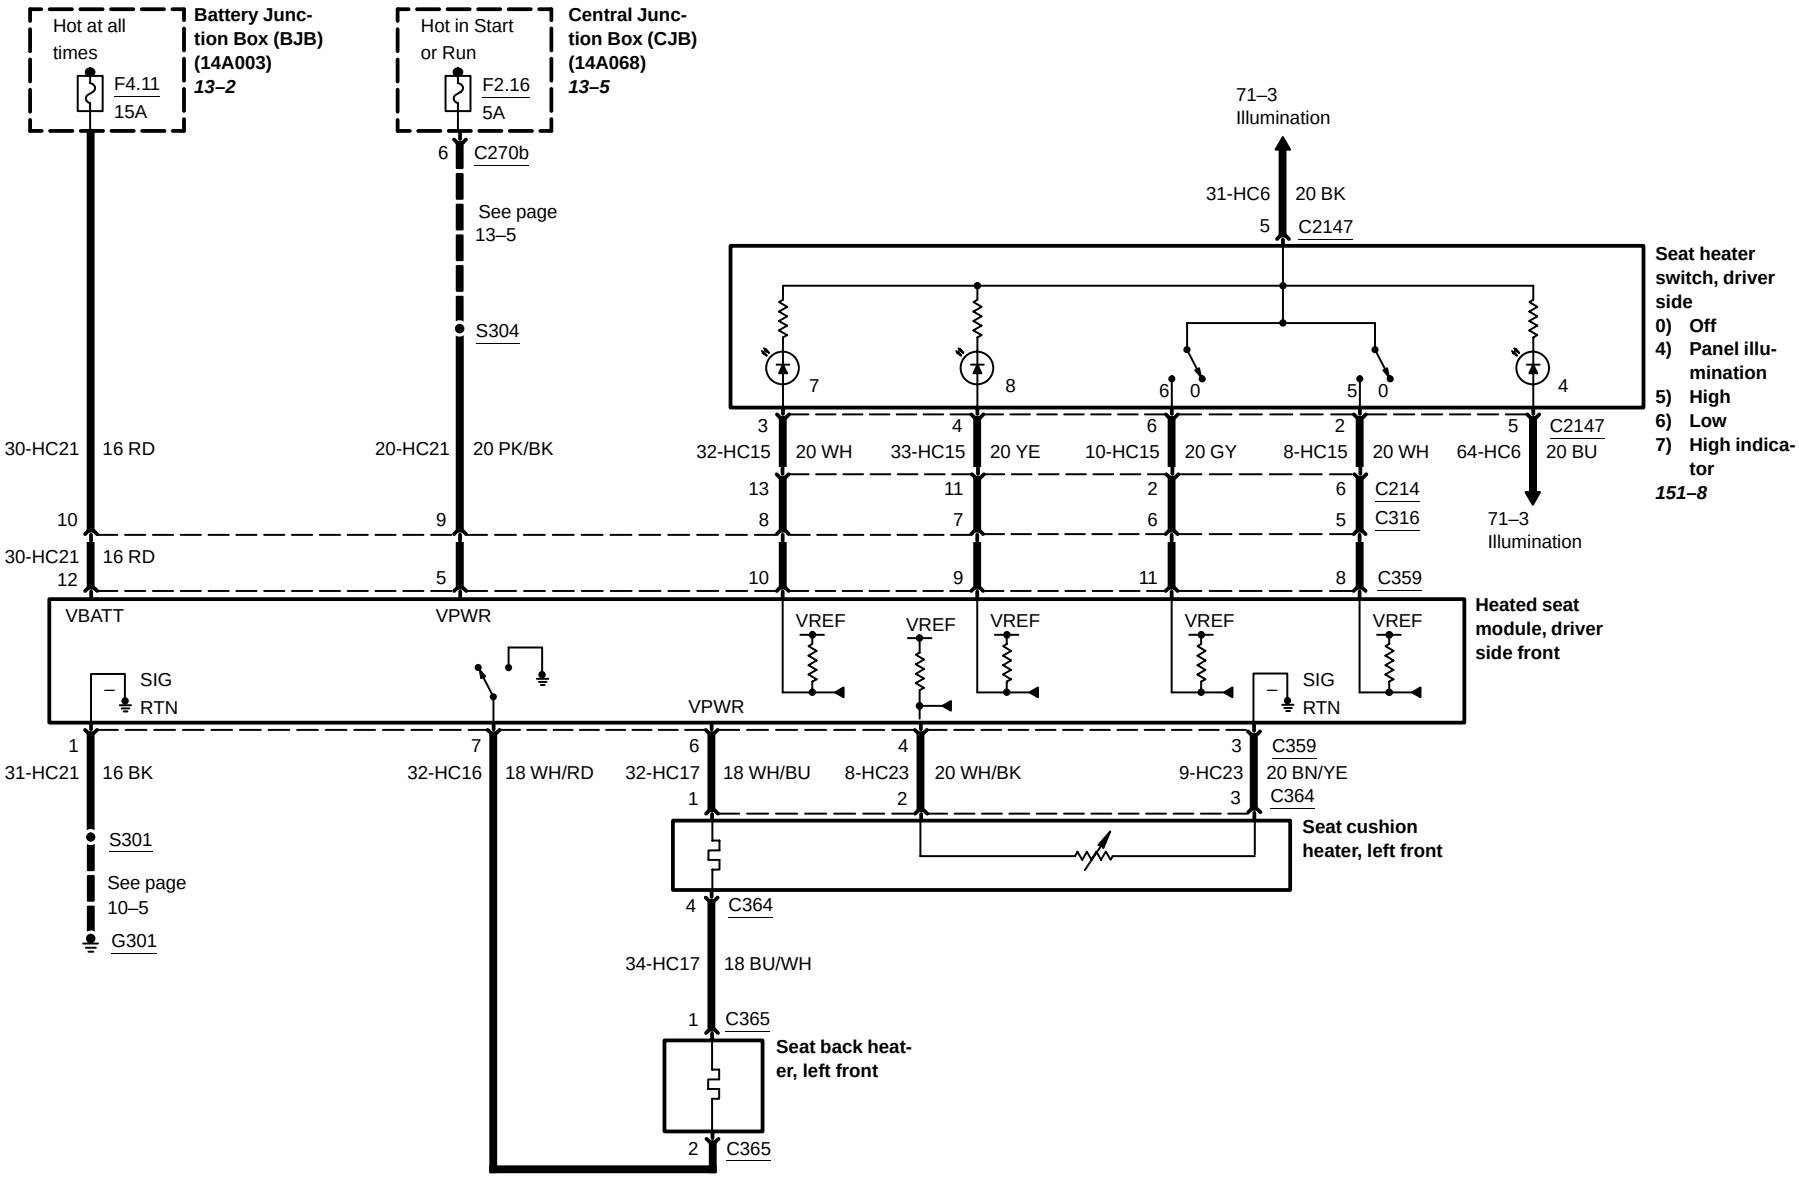
Hot at all times
F4.11
15A
Battery Junction Box (BJB) (14A003)
13–2
Hot in Start or Run
F2.16
5A
Central Junction Box (CJB) (14A068)
13–5
6 C270b
See page 13–5
S304
71–3 Illumination
31-HC6 20 BK
5 C2147
Seat heater switch, driver side
0) Off
4) Panel illumination
5) High
6) Low
7) High indicator
151–8
30-HC21 16 RD
20-HC21 20 PK/BK
32-HC15 20 WH
33-HC15 20 YE
10-HC15 20 GY
8-HC15 20 WH
64-HC6 20 BU
C214
C316
C359
C2147
71–3 Illumination
VBATT
VPWR
VREF
SIG RTN
Heated seat module, driver side front
31-HC21 16 BK
32-HC16 18 WH/RD
32-HC17 18 WH/BU
8-HC23 20 WH/BK
9-HC23 20 BN/YE
C364
Seat cushion heater, left front
S301
See page 10–5
G301
34-HC17 18 BU/WH
C365
Seat back heater, left front