C185

12B637

Fuel injector 5
(9F593)

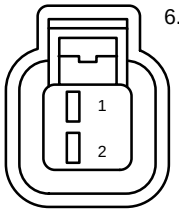

F02069

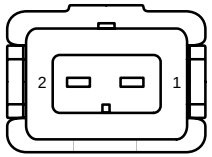

F02089

Pin	Circuit	Circuit function
1	559 (TN/BK)	Fuel injector 5, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C186

12B637

Fuel injector 6
(9F593)

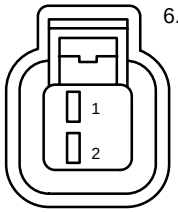

F02069

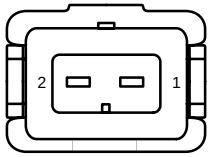

F02089

Pin	Circuit	Circuit function
1	560 (LG/OG)	Fuel injector 6, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C187

12B637

Fuel injector 7
(9F593)

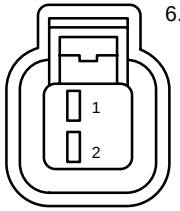

F02069

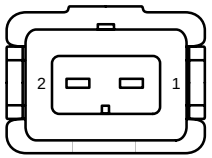

F02089

Pin	Circuit	Circuit function
1	561 (TN/RD)	Fuel injector 7, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C188

12B637

Fuel injector 8
(9F593)

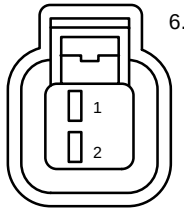

F02069

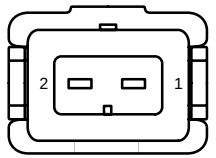

F02089

Pin	Circuit	Circuit function
1	562 (LB)	Fuel injector 8, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C189

12B637

Throttle Position
Sensor (TPS)
(9B989)



F06020

Pin	Circuit	Circuit Function
A	351 (BN/WH)	Reference voltage
B	359 (GY/RD)	Signal return
C	73 (OG/LB)	throttle position signal
D	–	not used
E	–	not used
F	–	not used