C466

14A005

Subwoofer amplifier (18C804)

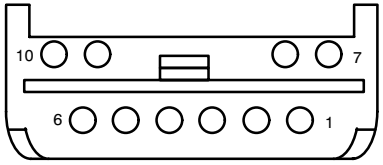

F10009

Pin	Circuit	Circuit function
1	173 (DG/VT)	Radio (18806) – Subwoofer, High, mute
2	–	not used
3	694 (BK/LG)	Ground
4	–	not used
5	720 (RD/YE)	Voltage supplied at all times (overload protected)
6	–	not used
7	167 (BN/OG)	TX, signal
8	168 (RD/BK)	RX, signal
9	–	not used
10	–	not used

C487

13412

Reversing lamp, left (13411)

Early production

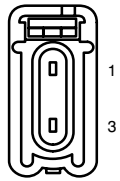

F03033

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	140 (BK/PK)	Voltage supplied in reverse

Late production

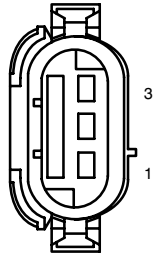

F03099

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	140 (BK/PK)	Voltage supplied in reverse