C365

14A699

N31
Seat back heater, left front

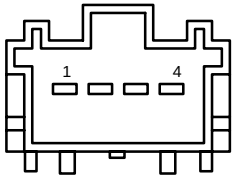

F04139

Pin	Circuit	Circuit function
1	1066 (GY/LB)	Seat back heater, driver side, feed
2	1062 (BN/LB)	Seat cushion heater, passenger side, Sensor, return
3	1063 (OG/LB)	Heated seat module, passenger side front
4	1067 (VT/LB)	Seat back heater, driver side, heater, return

C366

14A699

M231
Driver seat lumbar compressor motor (65500)



F02090

Pin	Circuit	Circuit function
1	1097 (BR)	Power lumbar switch, left, to, Front seat lumbar compressor motor
2	1094 (PK)	Power lumbar switch, left, to, Front seat lumbar compressor motor

C367

14716

A155
Side air bag module, left

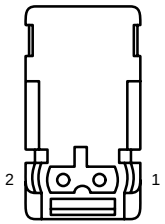

F02215

Pin	Circuit	Circuit function
1	1258 (BN/LB)	Air bag – driver side impact to module – return
2	1257 (WH/LB)	Air bag – driver side impact to module – feed

C368

14A699

M230
Driver seat backrest motor



F02071

Pin	Circuit	Circuit function
1	919 (GY/BK)	Seat regulator feed, Up/Down Circuit
2	918 (GY)	Seat regulator feed, Up/Down Circuit

C372

14B719

M214
Power seat motor assembly, left

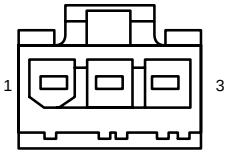

F03111

Pin	Circuit	Circuit function
1	446 (OG/WH)	Sensor, feed, from, Driver seat module (14C718)
2	442 (LG/OG)	Seat position sensor – horizontal sense
3	447 (OG/R)	Sensor, return, from, Driver seat module (14C718)

C373

14B719

M214
Power seat motor assembly, left

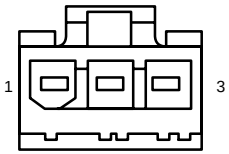

F03111

Pin	Circuit	Circuit function
1	447 (OG/R)	Sensor, return, from, Driver seat module (14C718)
2	444 (LG/BK)	Driver seat module (14C718), to, Power seat motor assembly, left
3	446 (OG/WH)	Sensor, feed, from, Driver seat module (14C718)