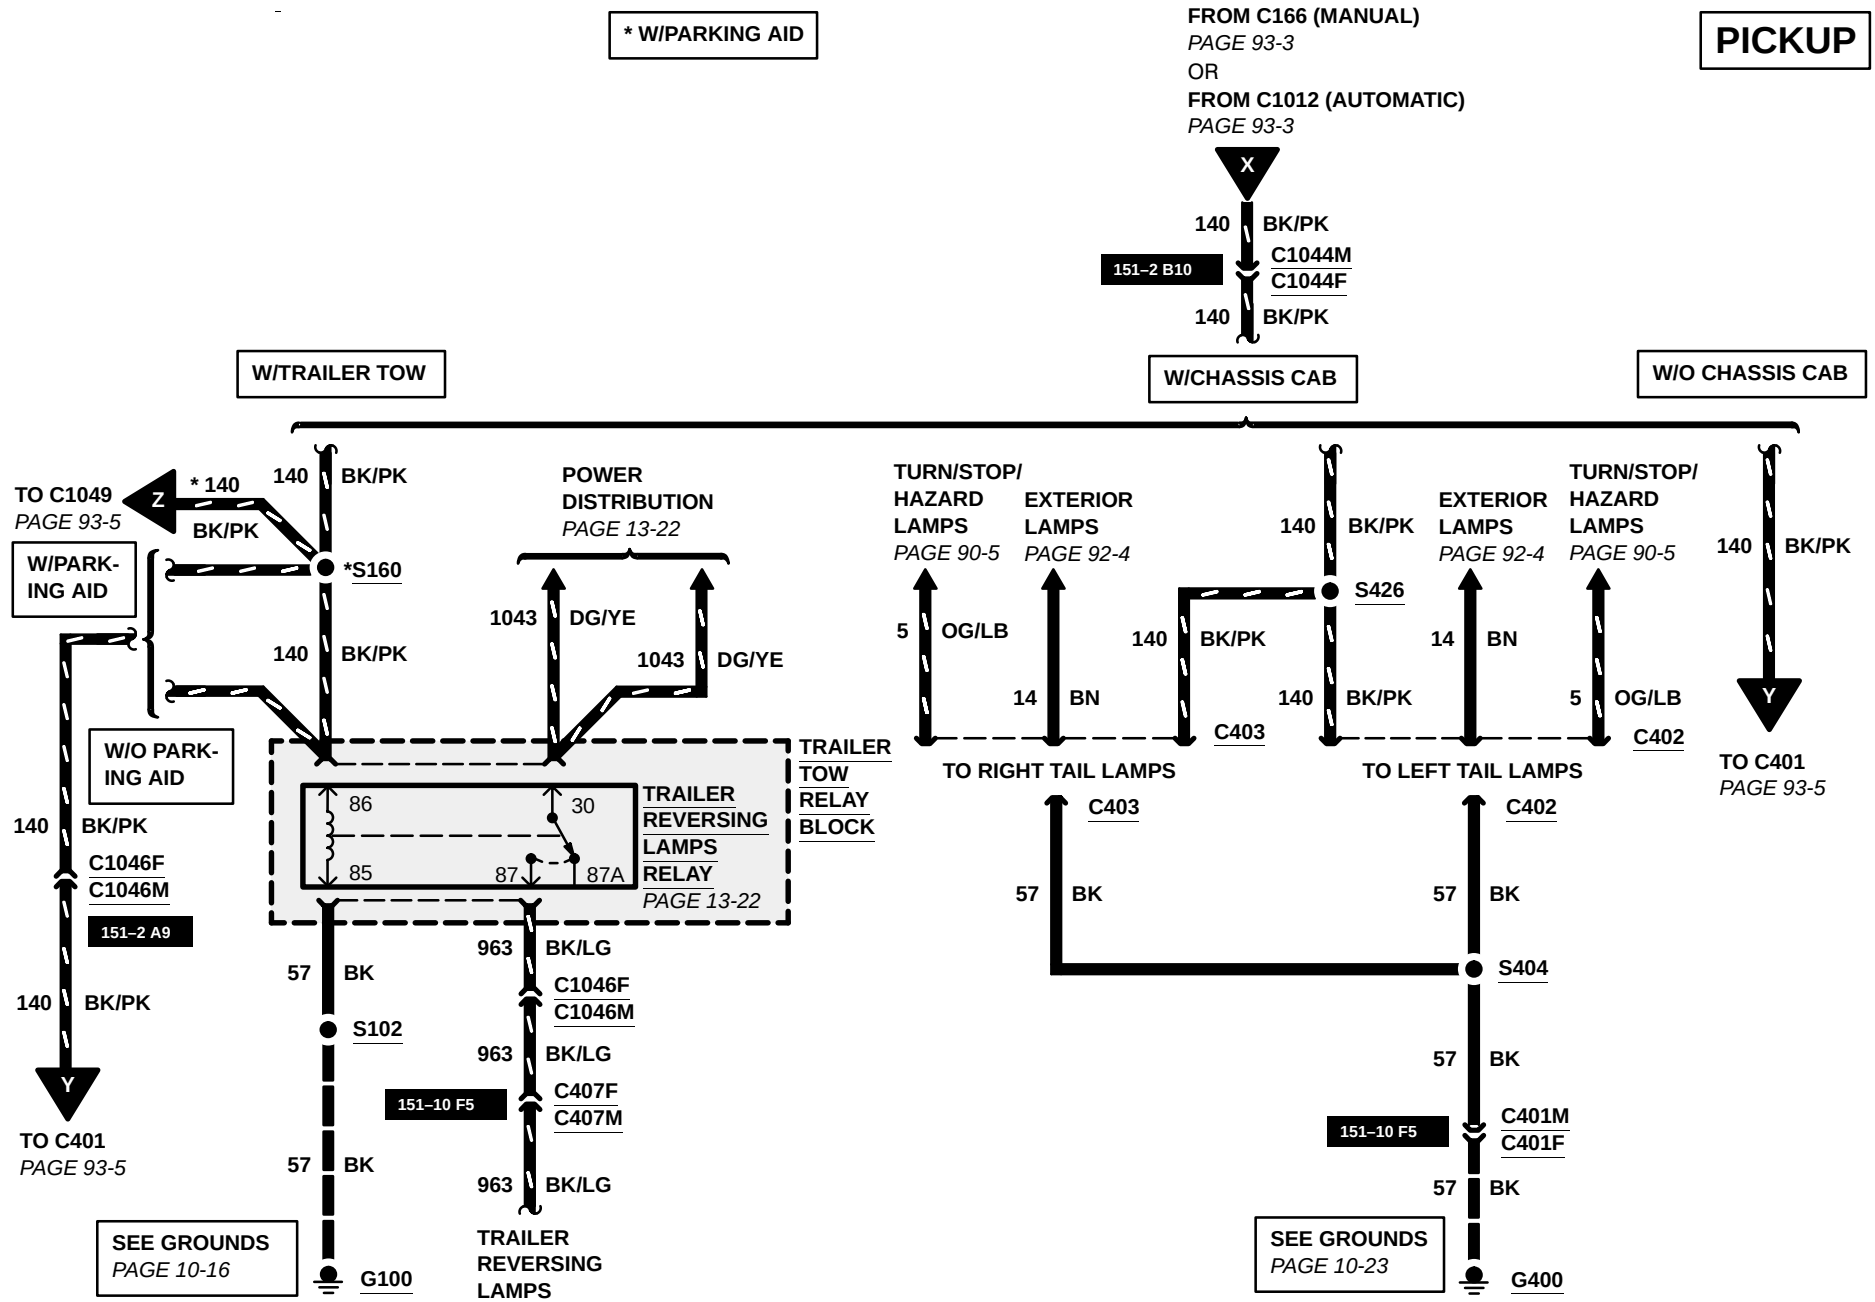
PICKUP
* W/PARKING AID
FROM C166 (MANUAL)
PAGE 93-3
OR
FROM C1012 (AUTOMATIC)
PAGE 93-3
X
140 BK/PK
151–2 B10
C1044M
C1044F
140 BK/PK
W/CHASSIS CAB
W/TRAILER TOW
W/O CHASSIS CAB
TO C1049
PAGE 93-5
Z
* 140
BK/PK
W/PARK-ING AID
140 BK/PK
*S160
POWER DISTRIBUTION
PAGE 13-22
1043 DG/YE
1043 DG/YE
140 BK/PK
W/O PARK-ING AID
TRAILER TOW RELAY BLOCK
86
30
85
87
87A
TRAILER REVERSING LAMPS RELAY
PAGE 13-22
140 BK/PK
C1046F
C1046M
151–2 A9
963 BK/LG
57 BK
C1046F
C1046M
S102
963 BK/LG
140 BK/PK
Y
TO C401
PAGE 93-5
151–10 F5
C407F
C407M
57 BK
963 BK/LG
SEE GROUNDS
PAGE 10-16
G100
TRAILER REVERSING LAMPS
TURN/STOP/ HAZARD LAMPS
PAGE 90-5
EXTERIOR LAMPS
PAGE 92-4
5 OG/LB
14 BN
140 BK/PK
C403
TO RIGHT TAIL LAMPS
140 BK/PK
S426
140 BK/PK
EXTERIOR LAMPS
PAGE 92-4
TURN/STOP/ HAZARD LAMPS
PAGE 90-5
14 BN
5 OG/LB
C402
TO LEFT TAIL LAMPS
140 BK/PK
Y
TO C401
PAGE 93-5
C403
57 BK
C402
57 BK
S404
57 BK
151–10 F5
C401M
C401F
57 BK
SEE GROUNDS
PAGE 10-23
G400