C331 (BK)

14A699

Lumbar adjust switch, right front

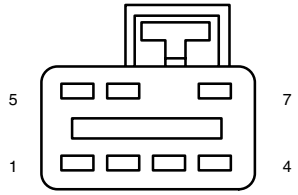

F07085

Pin	Circuit	Circuit function
1	1094 (PK)	Front seat lumbar compressor motor, In, feed
2	1462 (RD/WH)	Fused battery feed
3	57 (BK)	Ground
4	–	not used
5	–	not used
6	57 (BK)	Ground
7	1097 (BN)	Front seat lumbar compressor motor, Out, feed

C332 (GY)

14A699

Passenger seat horizontal motor

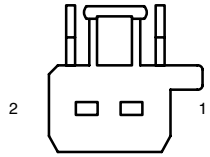

F02053

Pin	Circuit	Circuit function
1	986 (YE/WH)	Passenger seat horizontal motor, Forward, feed
2	987 (RD/WH)	Passenger seat horizontal motor, Rearward, feed

C339 (BK)

14335

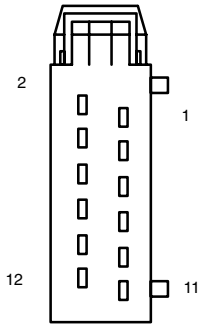

F12056

(1) 832 (LB/PK)
(2) 833 (TN)
(3) –
(4) 1068 (LG/BK)
(5) 1803 (WH)
(6) 694 (BK/LG)

14A005

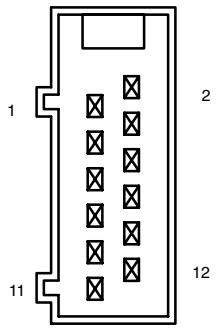

F12054

(7) –
(8) 1804 (LG)
(9) 1806 (BK)
(10) 1805 (RD)
(11) 720 (RD/YE)
(12) 48 (BK)