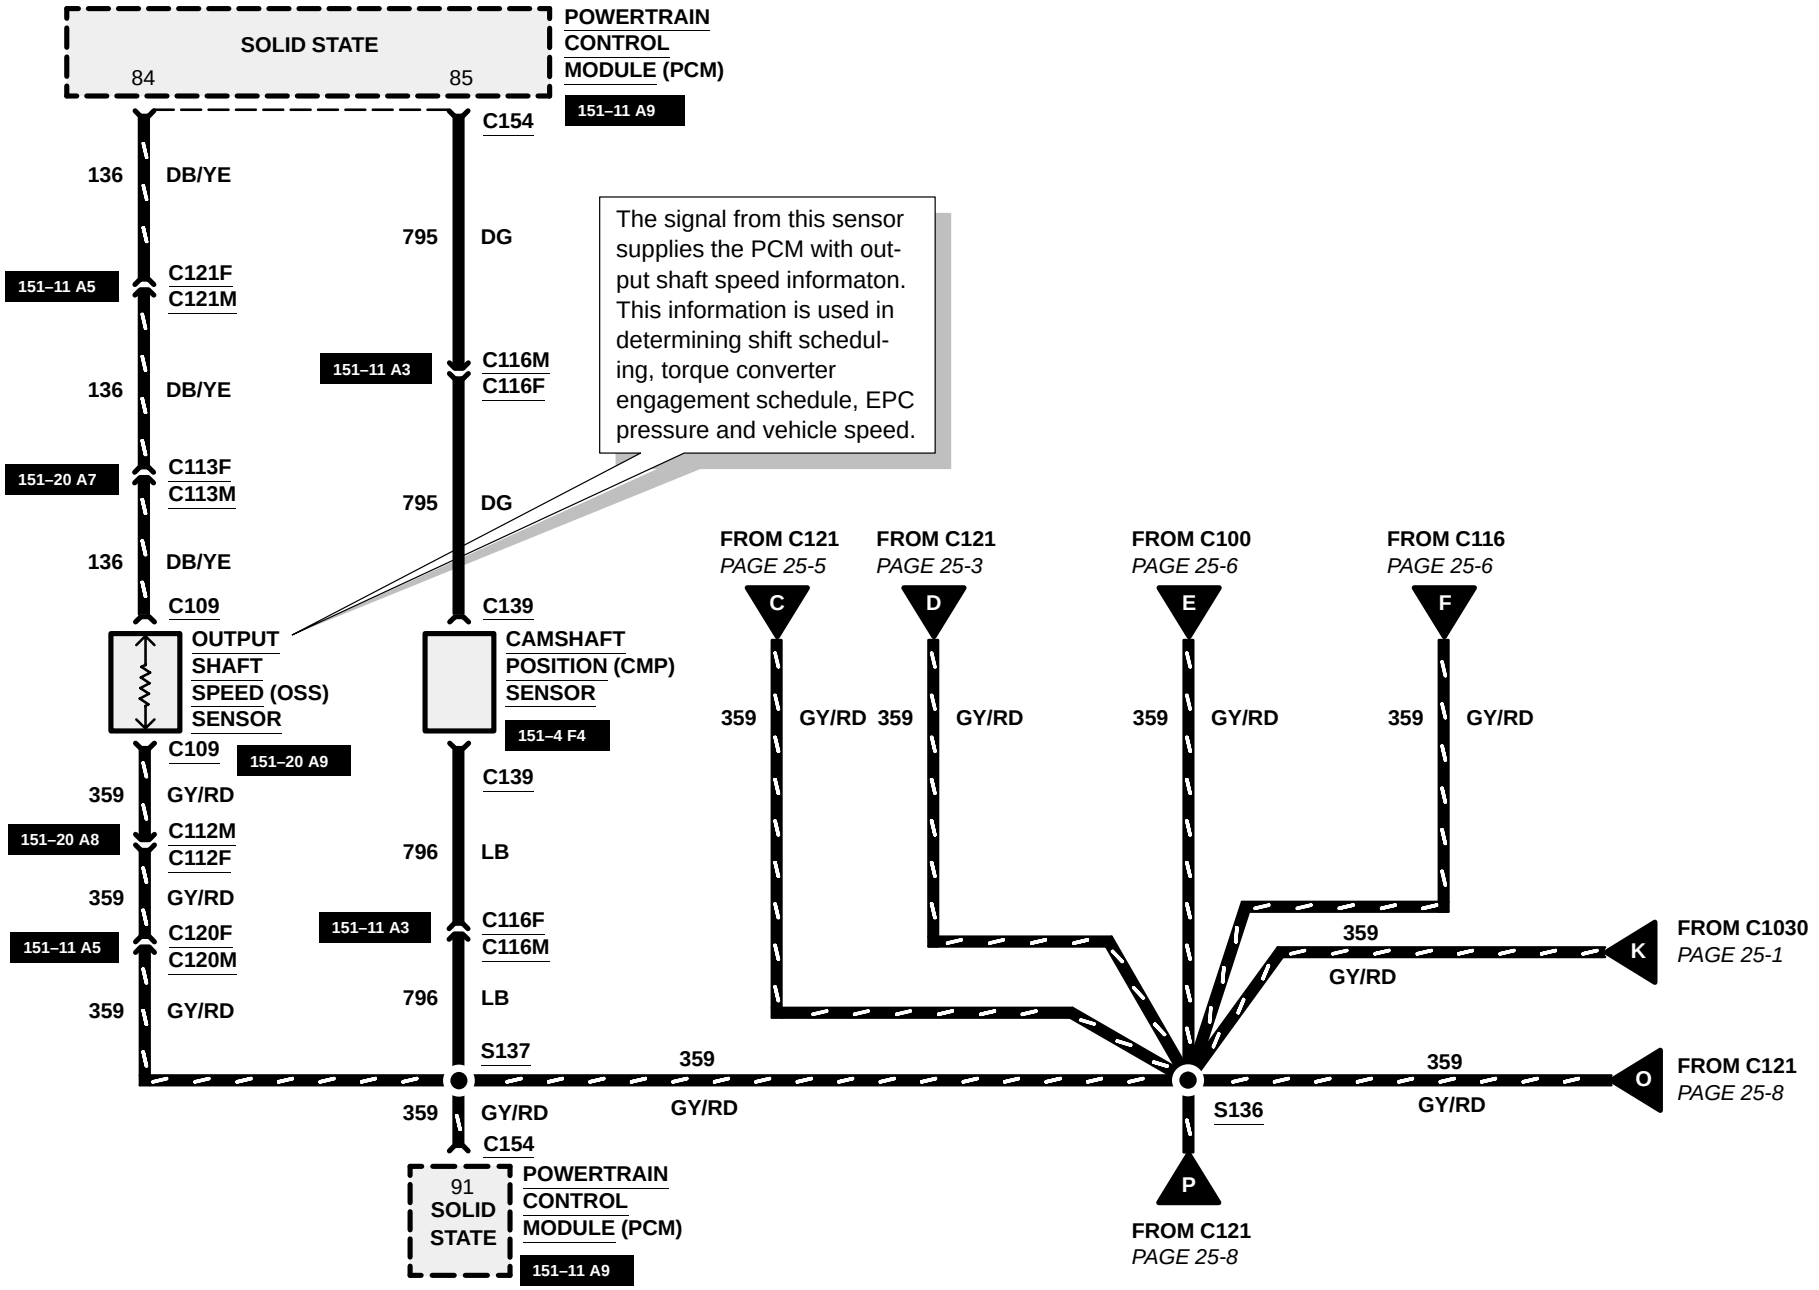
SOLID STATE
84
85
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
C154
136 DB/YE
795 DG
C121F
C121M
151–11 A5
151–11 A3
C116M
C116F
136 DB/YE
C113F
C113M
151–20 A7
795 DG
136 DB/YE
C109
C139
The signal from this sensor supplies the PCM with output shaft speed informaton. This information is used in determining shift scheduling, torque converter engagement schedule, EPC pressure and vehicle speed.
OUTPUT SHAFT SPEED (OSS) SENSOR
CAMSHAFT POSITION (CMP) SENSOR
151–4 F4
C109
151–20 A9
C139
359 GY/RD
C112M
C112F
151–20 A8
796 LB
359 GY/RD
C120F
C120M
151–11 A5
151–11 A3
C116F
C116M
359 GY/RD
796 LB
S137
359 GY/RD
359 GY/RD
C154
91
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
FROM C121
PAGE 25-5
FROM C121
PAGE 25-3
FROM C100
PAGE 25-6
FROM C116
PAGE 25-6
C
D
E
F
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
K
FROM C1030
PAGE 25-1
359 GY/RD
359 GY/RD
S136
O
FROM C121
PAGE 25-8
P
FROM C121
PAGE 25-8