C2005

14401

Flexible fuel sensor module

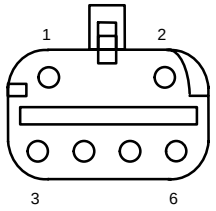

F06052

Pin	Circuit	Circuit function
1	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	564 (BN)	Ground
3	398 (BK/YE)	Ground
4	29 (YE/WH)	Fuel pump/fuel gauge sender
5	–	not used
6	27 (OG/LG)	Flexible fuel sensor module

C2006 (BK)

18C629

Front blower motor (19805)

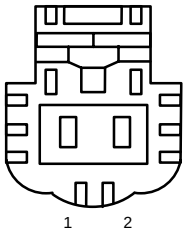

F02025

Pin	Circuit	Circuit function
1	(BK)	Front blower motor (19805) –
2	(OG)	Front blower motor (19805) +

C2008 (BK)

14401

Brake shift interlock

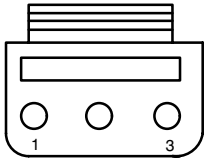

F03080

Pin	Circuit	Circuit function
1	810 (RD/LG)	Brake pedal position switch (13480), input
2	57 (BK)	Ground
3	1087 (OG)	Voltage in Run (overload protected)