C1184 (BK)

9D930

Fuel injector 4
(9F593)



F02058

Pin	Circuit	Circuit function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1185 (BK)

9D930

Fuel injector 5
(9F593)



F02058

Pin	Circuit	Circuit function
1	559 (TN/BK)	Fuel injector 5, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1186 (BK)

9D930

Fuel injector 6
(9F593)



F02058

Pin	Circuit	Circuit function
1	560 (LG/OG)	Fuel injector 6, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1199

12A581

Trailer tow relay,
parking lamp

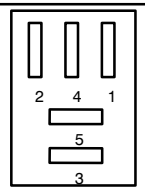

F05110

Pin	Circuit	Circuit function
1	14 (BN)	Hot in Park or Head
2	57 (BK)	Ground
3	1043 (DG/YE)	Voltage supplied at all times (overload protected)
4	–	not used
5	962 (BN/WH)	Trailer tow relay, parking lamp, switched output

C1200

12A581

Trailer tow relay,
battery charge

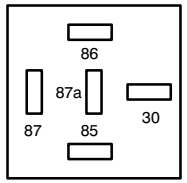

F05051

Pin	Circuit	Circuit function
30	175 (BK/YE)	Voltage supplied at all times (overload protected)
85	57 (BK)	Ground
86	294 (WH/LB)	Voltage in Run (overload protected)
87	49 (OG)	Trailer tow relay, battery charge, switched output
87a	–	not used

C1214 (BK)

12A581

Dropping resistor

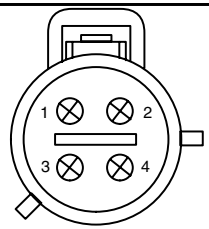

F04263

Pin	Circuit	Circuit function
1	922 (WH/RD)	Fuel pump, control
2	–	not used
3	–	not used
4	57 (BK)	Ground