C310b

14A488

Restraints Control Module
(RCM)

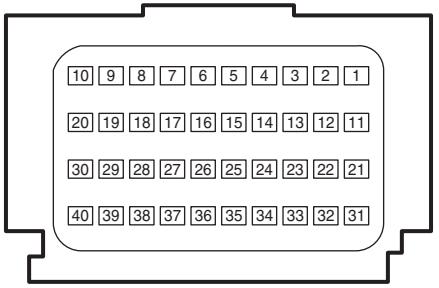

1F1T-14A464-BB (F)

Pin	Circuit	Circuit Function
1	—	not used
2	—	not used
3	1257 (WH/LB)	Airbag - driver side impact - to module - feed
4	1258 (RD)	Airbag - driver side impact - to module - return
5	1259 (WH/YE)	Airbag - passenger side impact - to module - feed
6	1260 (BN/YE)	Airbag - passsenger side impact - to module - return
7	—	not used
8	—	not used
9	—	not used
10	—	not used
11	—	not used
12	—	not used
13	1261 (WH/LG)	Airbag - driver side impact - crash sensor to module - feed
14	1262 (BN/LG)	Airbag - driver side impact - crash sensor to module - return
15	1263 (WH)	Airbag - passenger side impact - crash sensor to module - feed
16	1264 (BN)	Airbag - passenger side impact - crash sensor to module - return
17	—	not used
18	—	not used
19	617 (PK/OG)	Air bag crash sensor, #1 feed
20	618 (VT/LG)	Air bag crash sensor, #1 ground monitor

Pin	Circuit	Circuit Function
21	—	not used
22	—	not used
23	1520 (LG)	Driver seat track position switch
24	1558 (TN/BK)	Driver seat track position sensor - return
25	85 (BN/LB)	Driver buckle switch input
26	178 (DG/OG)	Passenger seat occupied switch
27	1261 (WH/LG)	Airbag - driver side impact - crash sensor to module - feed
28	1262 (BN/LG)	Airbag - driver side impact - crash sensor to module - return
29	1263 (WH)	Airbag - passenger side impact - crash sensor to module - feed
30	1264 (BN)	Airbag - passenger side impact - crash sensor to module - return
31	1079 (LG/RD)	Seat belt-driver pretensioner feed
32	1080 (LG/BK)	Seat belt-driver pretensioner return
33	1081 (YE/RD)	Seat belt- passenger pretensioner feed
34	1082 (YE/BK)	Seat belt- passenger pretensioner return
35	—	not used
36	—	not used
37	—	not used
38	—	not used
39	—	not used
40	—	not used