C523 (BK)

14631

Speaker, left front (18808)

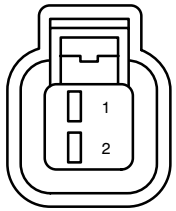

F02069

Pin	Circuit	Circuit function
1	804 (OG/LG)	Speaker, left front (18808) +
2	813 (LB/WH)	Speaker, left front (18808) –

C525 (WH)

14406

Door lock actuator, left front

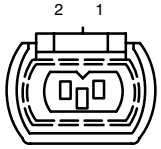

F02116

Pin	Circuit	Circuit function
1	1328 (RD/OG)	motor drive +/–
2	1329 (YE)	motor drive +/–

C526 (BK)

14631

Door ajar switch, left front

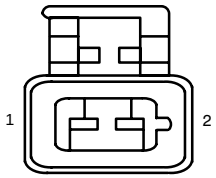

F02379

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	1312 (LG/BK)	Front Electronic Module (FEM) (13C788), signal

C527 (WH)

14631

Exterior rear view mirror switch (17B676)

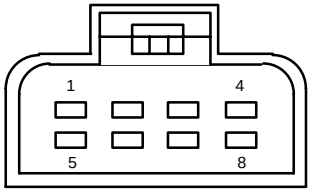

F08177

Pin	Circuit	Circuit function
1	956 (OG/LG)	Voltage supplied at all times (overload protected)
2	–	not used
3	543 (DG)	Right/Left mirror movement, Right mirror +/–
4	540 (RD)	Right/Left mirror movement, Left mirror +/–
5	1205 (BK)	Ground
6	1545 (OG)	Mirror motor, common
7	541 (DB)	Up/Down mirror movement, Left mirror +/–
8	544 (VT)	Up/Down mirror movement, Right mirror +/–