C1184

12B637

Fuel injector 4
(9F593)

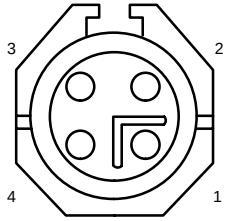

F04382

Pin	Circuit	Circuit function
1	8 (OG/YE)	open coil, Power
2	7 (LG/YE)	open coil, Ground
3	5 (OG/LB)	close coil, Power
4	6 (YE/LG)	close coil, Ground

C1185

12B637

Fuel injector 5
(9F593)

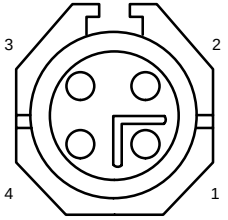

F04382

Pin	Circuit	Circuit function
1	24 (DB/OG)	open coil, Power
2	23 (TN/LG)	open coil, Ground
3	21 (DG/LG)	close coil, Power
4	22 (LB/BK)	close coil, Ground

C1186

12B637

Fuel injector 6
(9F593)

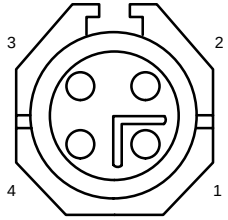

F04382

Pin	Circuit	Circuit function
1	16 (RD/LG)	open coil, Power
2	15 (RD/YE)	open coil, Ground
3	13 (RD/BK)	close coil, Power
4	14 (BN)	close coil, Ground

C1187

12A581

Trailer tow relay,
right turn

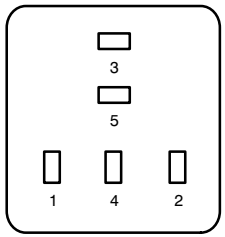

F05139

Pin	Circuit	Circuit function
1	5 (OG/LB)	Relay, control
2	57 (BK)	Ground
3	1362 (DG/OG)	Voltage supplied at all times (overload protected)
4	–	not used
5	64 (DG)	Turn signal