C648

R5
Daytime running lamps resistor

14A382

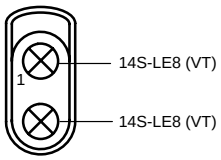

F02007

14K733

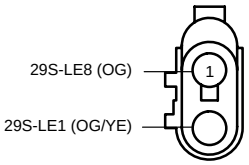

F02005

C653

14335

E30
Vanity mirror lamp, left

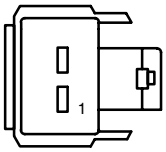

F02104

Pin	Circuit	Circuit Function
1	29-LB17 (OG/WH)	Voltage supplied at all times (overload protected)
2	31-LB16 (BK)	Ground

C654

14335

E31
Vanity mirror lamp, right

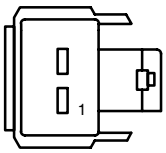

F02104

Pin	Circuit	Circuit Function
1	31-LB23 (BK)	Ground
2	29-LB24 (OG/YE)	Voltage supplied at all times (overload protected)

C684

14014

N100
Right front door courtesy lamp switch

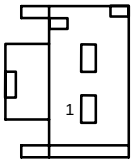

F02023

Pin	Circuit	Circuit Function
1	31S-LC21 (BK/GN)	Ground, switched
2	31-LC21 (BK)	Ground

C685

14014

N103
Left front door courtesy lamp switch

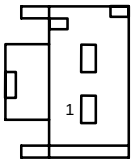

F02023

Pin	Circuit	Circuit Function
1	31S-LC9 (BK/RD)	Ground, switched
2	31-LC9 (BK)	Ground

C688

12A522

B105
Knock sensor 1

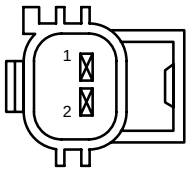

F02066

Pin	Circuit	Circuit Function
1	9-RJ18 (BN/YE)	Sensor signal return (reference/ground)
2	8-RJ18 (WH/BK)	Sensor signal

C691

14K733

Y134
EVAP canister purge valve

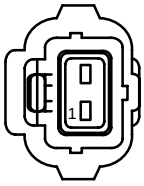

F02015

Pin	Circuit	Circuit Function
1	15-RL25 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-RL25 (BK/BU)	Ground,switched