* with IVD

C155 (BK)

14398

ABS control module
(2C219)

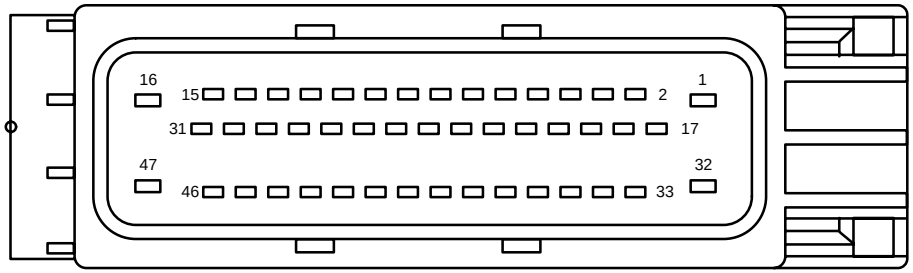

F47005

Pin	Circuit	Circuit function
1	534 (YE/LG)	Voltage supplied at all times (overload protected)
2	70 (LB/WH)	Data bus ISO 9141 (K–line)
3	*1572 (DG)	steering angle 1
4	601 (LB/PK)	Voltage, ignition switch in Start or Run (overload protected electronic module)
5	*1577 (RD/LB)	Sensor, Ground
6	*1573 (YE)	steering angle 2
7	*1576 (TN/BK)	Sensor, Power
8	512 (TN/LG)	Brake fluid level switch (2L414), Signal return
9	977 (VT/WH)	Brake fluid level switch (2L414), signal
10	–	not used
11	*3126 (TN/YE)	CAN Bus +
12	914 (TN/OG)	Standard Corporate Protocol (SCP) data +
13	*960 (BK/LB)	IVD Off indicator, control
14	915 (PK/LB)	Standard Corporate Protocol (SCP) data –
15	*3125 (RD/YE)	CAN Bus –

Pin	Circuit	Circuit function
16	274 (BK/WH)	Ground
17	*1582 (LG/RD)	ABS control module (2C219), to Brake booster sensor, Solenoid +
18	*3601 (WH/RD)	Reference voltage
19	*3603 (RD)	Sensor signal return (reference/ground)
20	*3600 (RD/WH)	Primary brake pressure sensor, monitor
21	–	not used
22	–	not used
23	–	not used
24	*3011 (BK/OG)	Sensor signal return (reference/ground)
25	*1879 (PK/BK)	Yaw velocity sensor, Low
26	*3010 (TN)	Reference voltage
27	*1581 (PK/LB)	ABS control module (2C219), to Brake booster sensor, switch
28	*1579 (OG/RD)	ABS control module (2C219), to Brake booster sensor, ring frequency

Pin	Circuit	Circuit function
29	*1878 (WH/BK)	Yaw velocity sensor, High
30	*1580 (WH/LG)	ABS control module (2C219) to Brake booster sensor, switch
31	*1583 (BN/WH)	ABS control module (2C219) to Brake booster sensor, Solenoid –
32	493 (BK/PK)	Voltage supplied at all times (overload protected)
33	514 (YE/RD)	Wheel speed sensor, right front (2C204) –
34	516 (YE/BK)	Wheel speed sensor, right front (2C204) +
35	*602 (RD/LG)	Tail lamp relay, control
36	518 (LG/RD)	Wheel speed sensor, left rear +
37	519 (LG/BK)	Wheel speed sensor, left rear –

Pin	Circuit	Circuit function
38	*959 (GY)	IVD control, input
39	–	not used
40	307 (BK/YE)	Brake pressure switch (2B264), input
	*3012 (WH)	Secondary brake pressure sensor, monitor
41	511 (LG)	Brake pedal position switch (13480), input
42	*524 (PK/BK)	Wheel speed sensor, right rear –
43	*523 (RD/PK)	Wheel speed sensor, right rear +
44	939 (VT)	Traction Control System (TCS) disable switch, input
	*810 (RD/LG)	Redundant pedal switch, signal
45	522 (TN/BK)	Wheel speed sensor, left front (2C205) +
46	521 (TN/OG)	Wheel speed sensor, left front (2C205) –
47	530 (LG/YE)	Ground