C319 (WH)

14A333

M211
Rear blower motor
resistor assembly

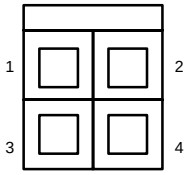

F04043

Pin	Circuit	Circuit Function
1	HB09 (BN)	Rear blower motor resistor assembly, to switch
2	HB10 (GN)	Rear blower motor resistor assembly, to switch - Low
3	HB07 (BK/YE)	Blower motor, to switch
4	HB08 (PK/BU)	Rear blower motor resistor assembly, to switch

C320 (BK)

14N104

N439
Radio control, rear

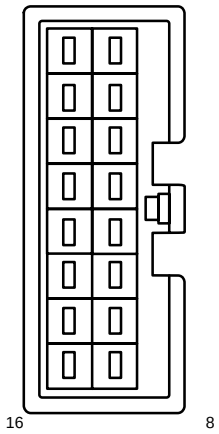

F16061

Pin	Circuit	Circuit Function
1	RB15 (BU)	Speaker, right rear
2	RA46 (RD/BU)	Radio, to Radio control, rear
3	RA21 (BU/BK)	Speaker, right rear
4	–	not used
5	RA12 (BU/YE)	Speaker, left rear
6	RA44 (BU/WH)	Radio, to Radio control, rear
7	RB11 (GN)	Speaker, left rear
8	–	not used
9	RB04 (YE/RD)	Radio to CD changer
10	RB37 (BN/WH)	Voltage supplied at all times (overload protected)
11	RBE2 (BK)	Ground
12	RB36 (LG)	Radio to CD changer
13	RB35 (VT)	Radio to CD changer
14	–	not used
15	LF94 (PK/BK)	Illumination, Ground
16	LF04 (PK)	Illumination, feed

C321

14N104

N274
Seat heater switch,
driver side



F02129

Pin	Circuit	Circuit Function
1	SB10 (WH/RD)	Power window relay, switched output
2	SBE5 (BK)	Ground