C122

14290
14398

M87
Speed control servo
(9C735)

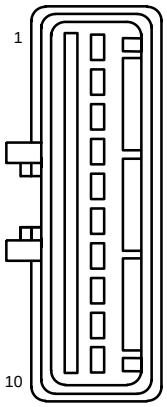

F10011

Pin	Circuit	Circuit function
1	203 (OG/LB)	Cruise set, indicator, control
2	–	not used
3	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
4	306 (TN/LB)	Brake pedal position switch (13480), input
5	151 (LB/BK)	Speed control switch, input
6	848 (DG/OG)	Speed control switch, Ground
7	1003 (GY/YE)	Voltage in Run (overload protected)
8	–	not used
9	307 (BK/YE)	Brake pressure switch (2B264), input
10	57 (BK)	Ground

C124

14290
14398

N1
Brake fluid level
switch (2L414)

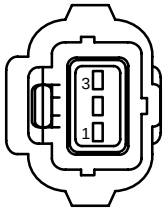

F03093

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	512 (TN/LG)	Brake indicator, control
3	977 (VT/WH)	Brake indicator, control

C125

14398

M111
Windshield wiper
motor (17508)

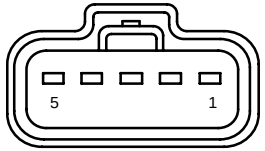

F05091

Pin	Circuit	Circuit function
1	56 (DB/OG)	Wiper high/low relay, switched power, output, High
2	58 (WH)	Wiper high/low relay, switched power, output, Low
3	57 (BK)	Ground
4	63 (RD)	Voltage in Run or Accessory (overload protected)
5	671 (LB)	Wiper run/park relay, switched output