* Late production

C505 (GN)

14A005

Door lock switch, driver side (14028)

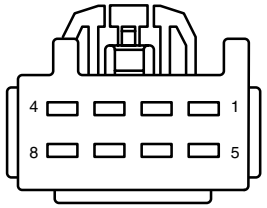

F08217

Pin	Circuit	Circuit function
1	–	not used
2	119 (PK/YE)	Door lock switch, input
3	57 (BK)	Ground
4	57 (BK)	Ground
5	1499 (PK/LG)	Accessory delay relay, output
	*194 (PK)	Accessory delay relay, output
6	120 (PK/LG)	Door unlock, switch, input
7	–	not used
8	–	not used

* Navigator
** Navigator, Early production
*** Navigator, Late production

C510 (GY)

14A005

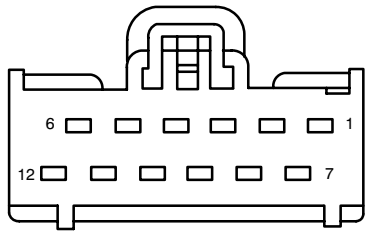

F12137

(1) 117 (PK/BK)
(2) 316 (YE/LB)
*57 (BK)
(3) 317 (GY/OG)
*875 (BK/LB)
(4) 314 (TN/LB)
*344 (BK/YE)
(5) 400 (LB/BK)
**2018 (LG/OG)
***2018 (OG/YE)
(6) 193 (YE/LG)
*194 (PK)
(7) 163 (RD/OG)
(8) 57 (BK)
*992 (WH/BK)
(9) 319 (YE/BK)
(10) 313 (WH/YE)
*991 (TN/LB)
(11) 344 (BK/YE)
*1523 (DG)
(12) 320 (RD/BK)

14631

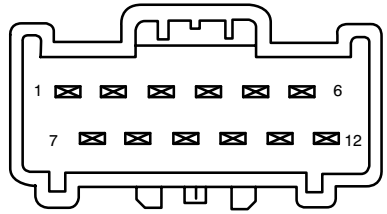

F12169

(1) 117 (PK/BK)
(2) 316 (YE/LB)
*57 (BK)
(3) 317 (GY/OG)
*875 (BK/LB)
(4) 314 (TN/LB)
*344 (BK/YE)
(5) 400 (LB/BK)
**2018 (LG/OG)
***2018 (OG/YE)
(6) 193 (YE/LG)
*194 (PK)
(7) 163 (RD/OG)
(8) 57 (BK)
*992 (WH/BK)
(9) 319 (YE/BK)
(10) 313 (WH/YE)
*991 (TN/LB)
(11) 344 (BK/YE)
*1523 (DG)
(12) 320 (RD/WH)